

SHARP

Important



R-61FBST / R-62FBST BUILT-IN MICROWAVE OVEN WITH GRILL OPERATION MANUAL WITH COOKBOOK

OPERATION MANUAL

This operation manual contains important information which you should read carefully before using your microwave oven.

IMPORTANT: There may be a serious risk to health if this operation manual is not followed or if the oven is modified so that it operates with the door open.

800 W (IEC 60705)

ENGLISH



Dear Customer,

Congratulations on acquiring your new microwave oven with grill, which from now on will make your kitchen chores considerably easier.

You will be pleasantly surprised by the kinds of things you can do with a microwave. Not only can you use it for rapid defrosting or heating up of food, you can also prepare whole meals.

In our test kitchen our microwave team has gathered together a selection of the most delicious international recipes which are quick and simple to prepare.

Be inspired by the recipes we have included and prepare your own favourite dishes in your microwave oven.



There are so many advantages to having a microwave oven which we are sure you will find exciting:

- Food can be prepared directly in the serving dishes, leaving less to wash up.
- Shorter cooking times and the use of little water and fat ensure that many vitamins, minerals and characteristic flavours are preserved.

We advise you to read the cookery book guide and operating instructions carefully.

You will then easily understand how to use your oven.

Enjoy using your microwave oven and trying out the delicious recipes.

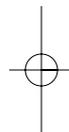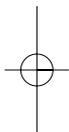

CONTENTS




OVEN AND ACCESSORIES	2
CONTROL PANEL	3
IMPORTANT SAFETY INSTRUCTIONS	4-6
INSTALLATION	7 - 8
BEFORE OPERATION	9
SETTING THE CLOCK	9
MICROWAVE POWER LEVEL	10
MICROWAVE COOKING	11
GRILL COOKING/DUAL GRILL COOKING	12
OTHER CONVENIENT FUNCTIONS	13 - 14
AUTOMATIC OPERATION	15
AUTOMATIC CHARTS	16 - 18
RECIPES FOR AUTOMATIC AC-7 & AC-8	18 - 19
CARE AND CLEANING	20
SERVICE CALL CHECK	20
COOKBOOK	21-40
SERVICE ADDRESSES	41-46
SPECIFICATIONS	47



ENGLISH

OVEN AND ACCESSORIES

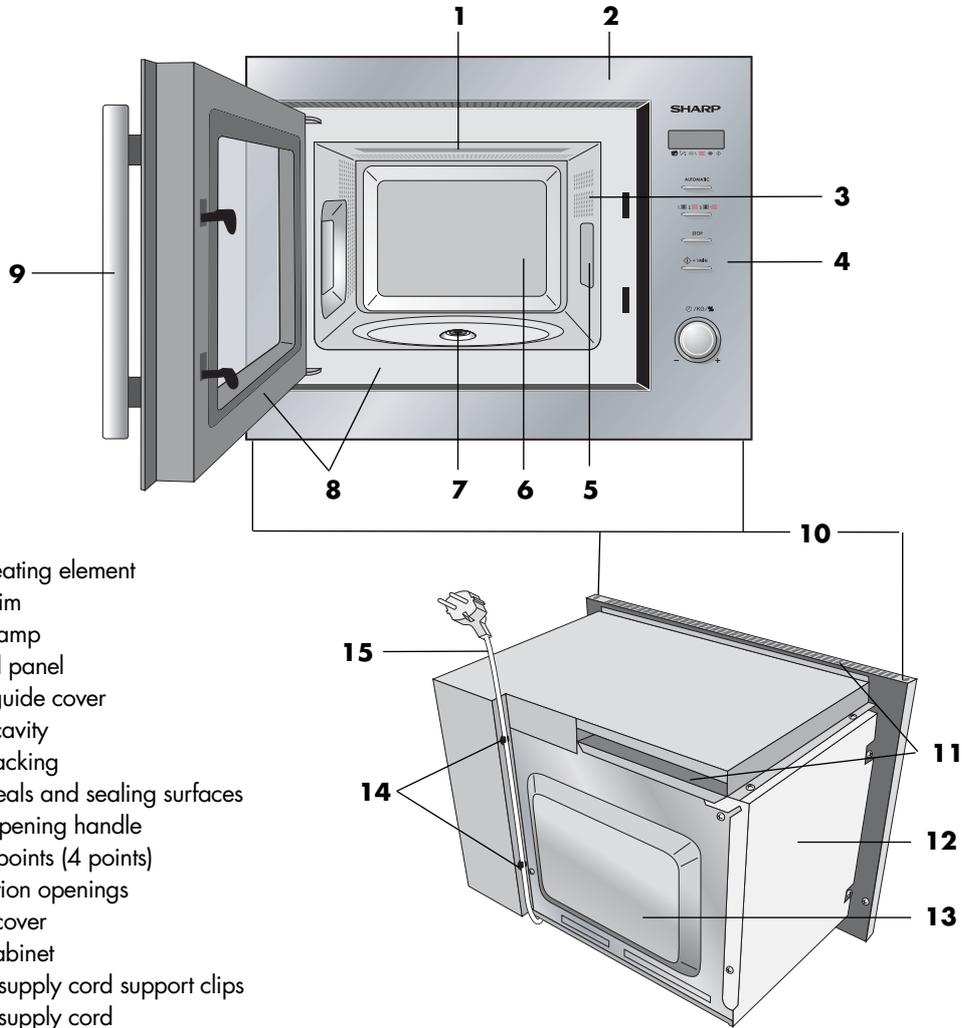

- 1 Grill heating element
- 2 Front trim
- 3 Oven lamp
- 4 Control panel
- 5 Waveguide cover
- 6 Oven cavity
- 7 Seal packing
- 8 Door seals and sealing surfaces
- 9 Door opening handle
- 10 Fixing points (4 points)
- 11 Ventilation openings
- 12 Outer cover
- 13 Rear cabinet
- 14 Power supply cord support clips
- 15 Power supply cord

ACCESSORIES:

Check to make sure the following accessories are provided:


- (16) Turntable (17) Roller stay (18) Rack
- (19) 4 fixing screws (not shown)

Place the roller stay in the seal packing on the floor of the cavity.


Then place the turntable on the roller stay.

To avoid turntable damage, ensure dishes or containers are lifted clear of the turntable rim when removing them from the oven.

NOTE: When you order accessories, please mention two items: part name and model name to your dealer or SHARP authorised service agent.

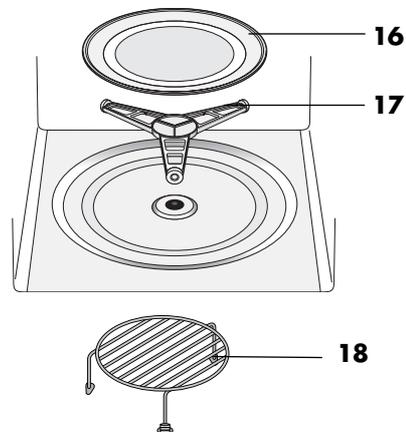

CONTROL PANEL

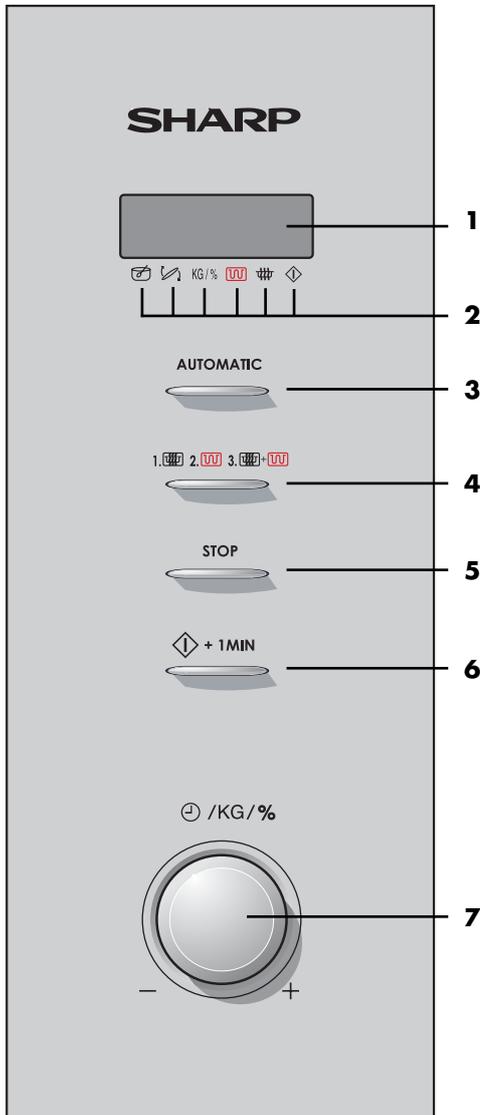

CONTROL PANEL

1 Digital Display

2 Indicators

The appropriate indicator will flash or light up, just above each symbol according to the instruction. When an indicator is flashing, press the suitable button (having the same symbol) or do the necessary operation.

Stir

Turn over

KG/% Weight/Power level

Grill

Microwave

Cooking in progress

3 AUTOMATIC button

Press to select one of the 12 automatic programmes.

4 COOKING MODE button

Press to select either microwave, grill or dual grill, or use to set the clock.

1. press once to select microwave

2. press twice to select the grill

3. press three times to select dual grill (microwave and grill)

5 STOP button

6 START/+1MIN button

7 TIMER/WEIGHT/POWER knob



IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To avoid the danger of fire

The microwave oven should not be left unattended during operation. Power levels that are too high or cooking times that are too long may overheat foods resulting in a fire.

The electrical outlet must be readily accessible so that the unit can be unplugged easily in an emergency.

The AC power supply must be 230V, 50Hz, with a minimum 16A distribution line fuse, or a minimum 16A distribution circuit breaker.

It is recommended that a separate circuit serving only this appliance be provided.

Do not store or use the oven outdoors.

If food being heated begins to smoke, DO NOT OPEN THE DOOR. Turn off and unplug the oven and wait until the food has stopped smoking. Opening the door while food is smoking may cause a fire.

Use only microwave-safe containers and utensils. See Page 21.

Do not leave the oven unattended when using disposable plastic, paper or other combustible food containers.

Clean the waveguide cover, the oven cavity, the turntable and roller stay after use. These must be dry and free from grease. Built-up grease may overheat and begin to smoke or catch fire.

Do not place flammable materials near the oven or ventilation openings. Do not block the ventilation openings.

Remove all metallic seals, wire twists, etc., from food and food packages. Arcing on metallic surfaces may cause a fire.

Do not use the microwave oven to heat oil for deep frying. The temperature cannot be controlled and the oil may catch fire.

To make popcorn, use only special microwave popcorn makers.

Do not store food or any other items inside the oven.

Check the settings after you start the oven to ensure the oven is operating as desired.

See the corresponding hints in this operation manual and the cookery book section.

To avoid the possibility of injury

WARNING:

Do not operate the oven if it is damaged or malfunctioning. Check the following before use:

- The door; make sure the door closes properly and ensure it is not misaligned or warped.
- The hinges and safety door latches; check to make sure they are not broken or loose.
- The door seals and sealing surfaces; ensure that they have not been damaged.
- Inside the oven cavity or on the door; make sure there are no dents.
- The power supply cord and plug; ensure that they are not damaged.

Never adjust, repair or modify the oven yourself. It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.

Do not operate the oven with the door open or alter the door safety latches in any way.

Do not operate the oven if there is an object between the door seals and sealing surfaces.

Do not allow grease or dirt to build up on the door seals and adjacent parts. Follow instructions for "Care and Cleaning", Page 20.

Individuals with PACEMAKERS should check with their doctor or the manufacturer of the pacemaker for precautions regarding microwave ovens.

To avoid the possibility of electric shock

Under no circumstances should you remove the outer cabinet.

Never spill or insert any objects into the door lock openings or ventilation openings. In the event of a spill, turn off and unplug the oven immediately, and call an authorised SHARP service agent.

Do not immerse the power supply cord or plug in water or any other liquid.

IMPORTANT SAFETY INSTRUCTIONS



Do not allow the power supply cord to run over any hot or sharp surfaces, such as the hot air vent area at the top rear of the oven.

Do not attempt to replace the oven lamp yourself or allow anyone who is not an electrician authorised by SHARP to do so. If the oven lamp fails, please consult your dealer or an authorised SHARP service agent.

If the power supply cord of this appliance is damaged, it must be replaced with a special cord. The exchange must be made by an authorised SHARP service agent.

To avoid the possibility of explosion and sudden boiling:

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

Never use sealed containers. Remove seals and lids before use. Sealed containers can explode due to a build up of pressure even after the oven has been turned off.

Take care when microwaving liquids. Use a wide-mouthed container to allow bubbles to escape.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.

To prevent sudden eruption of boiling liquid and possible scalding:

1. Stir liquid prior to heating/reheating.
2. It is advisable to insert a glass rod or similar utensil into the liquid whilst reheating.
3. Let liquid stand in the oven at the end of cooking time to prevent delayed eruptive boiling.

Do not cook eggs in their shells, and whole hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave cooking has ended. To cook or reheat eggs which have not been scrambled or mixed, pierce the yolks and the whites, or the eggs may explode. Shell and slice hard boiled eggs before reheating them in the microwave oven.

Pierce the skin of such foods as potatoes, sausages and fruit before cooking, or they may explode.

To avoid the possibility of burns

Use pot holders or oven gloves when removing food from the oven to prevent burns.

Always open containers, popcorn makers, oven cooking bags, etc., away from the face and hands to avoid steam burns.

To avoid burns, always test food temperature and stir before serving and pay special attention to the temperature of food and drink given to babies, children or the elderly.

Temperature of the container is not a true indication of the temperature of the food or drink; always check the food temperature.

Always stand back from the oven door when opening to avoid burns from escaping steam and heat.

Slice stuffed baked foods after heating to release steam and avoid burns.

Keep children away from the door to prevent them burning themselves.

Do not touch the oven door, outer cabinet, rear cabinet, oven cavity, ventilation openings, accessories and dishes during **GRILL** mode, **DUAL GRILL** mode and **AUTOMATIC** operation as they will become hot. Before cleaning make sure they are not hot.

To avoid misuse by children

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Do not lean or swing on the oven door. Do not play with the oven or use it as a toy.

Children should be taught all important safety instructions: use of pot holders, careful removal of food coverings; paying special attention to packaging (e.g. self-heating materials) designed to make food crisp, as they may be extra hot.



IMPORTANT SAFETY INSTRUCTIONS

Other warnings

Never modify the oven in any way.

This oven is for home food preparation only and may only be used for cooking food. It is not suitable for commercial or laboratory use.

To promote trouble-free use of your oven and avoid damage.

Never operate the oven when it is empty except where recommended in the operation manual, see Page 12 Note 2. Doing so may damage the oven.

When using a browning dish or self-heating material, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable and roller stay due to heat stress. The preheating time specified in the dish's instructions must not be exceeded.

Do not use metal utensils, which reflect microwaves and may cause electrical arcing. Do not put cans in the oven.

Use only the turntable and the roller stay designed for this oven. Do not operate the oven without the turntable.

To prevent the turntable from breaking:

(a) Before cleaning the turntable with water, leave the turntable to cool.

(b) Do not put hot foods or hot utensils on a cold turntable.

(c) Do not put cold foods or cold utensils on a hot turntable.

Do not place anything on the outer cabinet during operation.

Do not use plastic containers for microwaving if the oven is still hot from using the **GRILL** mode, **DUAL GRILL** mode and **AUTOMATIC** operation, because they may melt. Plastic containers must not be used during above modes unless the container manufacturer says they are suitable.

NOTE:

If you are unsure how to connect your oven, please consult an authorised, qualified electrician.

Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the correct electrical connection procedure.

Water vapour or drops may occasionally form on the oven walls or around the door seals and sealing surfaces. This is a normal occurrence and is not an indication of microwave leakage or a malfunction.

INSTALLATION




INSTALLING THE APPLIANCE

1. Remove all packaging and check carefully for any signs of damage.
2. Fit the appliance into the kitchen cupboard slowly, and without force, until the front frame of the oven seals against the front opening of the cupboard.
3. Ensure the appliance is stable and not leaning. Ensure that a 5mm gap is kept between the cupboard door above and the top of the frame (see diagram).




4. Fix the oven in position with the screws provided. The fixing points are located on the top and bottom corners of the oven (see diagram, item 10, on page 2).

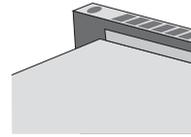

5. It is important to ensure that the installation of this product conforms to the instructions in this operation manual and the hob manufacturer's installation instructions.

SAFE USE OF THE APPLIANCE

- This appliance has been tested and approved for use near domestic gas, electric and induction hobs only.
- Sufficient space between hob and microwave should be allowed to prevent overheating of microwave oven, surrounding cupboard and accessories.
- Do not operate the hob without pans when the microwave oven is operating.
- The cupboard must be a minimum of 500 mm (A) above the worktop and must **not** be installed **directly** above a hob or other kitchen appliance e.g. conventional oven or refrigerator.
- Care should be taken when attending to the microwave oven while the hob is on.
- The front of the oven can be cleaned with mild soap and water. Do not use commercial oven cleaners, abrasive harsh cleaners, or those that contain Sodium Hydroxide.

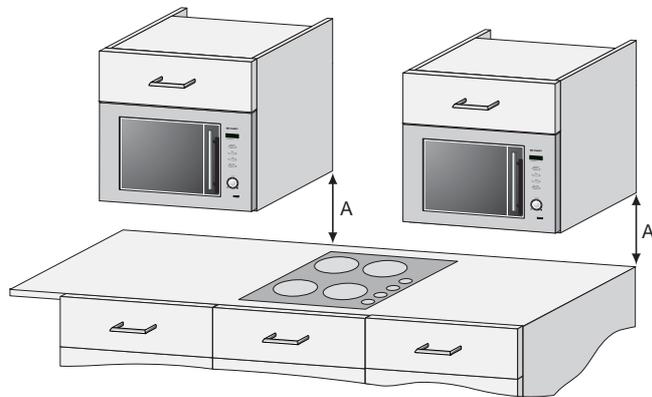




INSTALLATION

CONNECTING THE APPLIANCE TO THE POWER SUPPLY

- **The electrical outlet should be readily accessible so that the unit can be unplugged easily in an emergency.**
- **The socket should not be positioned behind the cupboard.**
- The best position is above the cupboard, see (A).
When not connecting the power supply cord to position (A) it should be removed from the support clips (see diagram, item 14, on page 2) and routed under the oven.
- Connect the appliance a single phase 230V/50Hz alternating current via a correctly installed earth socket.
The socket must be fused with a $\geq 16A$ fuse.
- **The power supply cord may only be replaced by an electrician.**
- Before installing, tie a piece of string to the power supply cord to facilitate connection to point (A) when the appliance is being installed.
- When inserting the appliance into the high-sided cupboard, DO NOT crush the power supply cord.
- Do not immerse the power supply cord or plug in water or any other liquid.

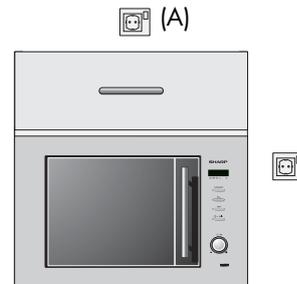

TO REPLACE THE MAINS PLUG

The wires in the power supply cord are colour coded as shown:

Green and yellow stripes	=	EARTH
Blue	=	NEUTRAL
Brown	=	LIVE

As the colours in the power supply cord of your oven may not correspond with the coloured marking identifying the terminals in your plug, connect the wires as described:

- The green and yellow wire to the plug terminal marked E or \equiv or coloured green or coloured green and yellow.
- The blue wire to the plug terminal marked N or coloured black or coloured blue.
- The brown wire to the plug terminal marked L or coloured red or coloured brown.

Make sure the terminal screws are tight and the cord is held securely by the cable grip where it enters the plug.

Like most appliances in your home, your oven must be connected to a single phase 230V, 50Hz alternating current supply.

If you do not make the proper electrical connections you might damage the oven or injure yourself. Neither SHARP nor the supplier will be liable if this happens.



WARNING: THIS APPLIANCE MUST BE EARTHED

If you have any doubts about your electrical supply ask a qualified electrician.

BEFORE OPERATION




Plug in the oven.

1. The oven display will flash:



2. Press the **STOP** button, the display will show:

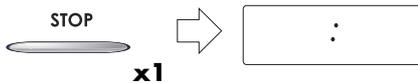

3. To set the clock, see below.

4. Heat the oven without food. (See page 12, Note 2).

Using the STOP button

Use the **STOP** button to:

1. Erase a mistake during programming.
2. Stop the oven temporarily during cooking.
3. Cancel a programme during cooking, touch twice.

SETTING THE CLOCK



There are two setting modes: 12 hour clock and 24 hour clock.

1. To set the 12 hour clock, hold the **COOKING MODE** button down for 3 seconds. **12 H** will appear in the display.
2. To set the 24 hour clock, press the **COOKING MODE** button **once more** after Step 1, in the example below **24 H** will appear in the display.

1. 2. 3.



x1 and hold for 3 secs.

To set the clock, follow the example below.

Example:

To set the 24 hour clock to 23:35.

1. Choose the clock function. (12 hour clock).

1. 2. 3.



x1 and hold for 3 seconds

Choose the 24 hour clock.

1. 2. 3.



x1

2. Set the hours. Rotate the **TIMER/WEIGHT/POWER** knob until the correct hour is displayed (23).

/KG/%



3. Press the **COOKING MODE** button to change from hours to minutes.


1. 2. 3.



x1

4. Set the minutes. Rotate the **TIMER/WEIGHT/POWER** knob until the correct minute is displayed (35).

/KG/%

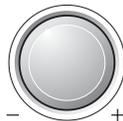

5. Press the **COOKING MODE** button to start the clock.

1. 2. 3.



x1



NOTES:

1. You can rotate the **TIMER/WEIGHT/POWER** knob clockwise or counter-clockwise.
2. Press the **STOP** button if you make a mistake during programming.
3. If the electrical power supply to your microwave oven is interrupted, the display will intermittently

show **88:88** after the power is reinstated. If this occurs during cooking, the programme will be erased. The time of day will also be erased.

4. When you want to reset the time of day, follow the above example again.



MICROWAVE POWER LEVEL

Your oven has 5 power levels. To choose the power level for cooking, follow the advice given in the recipe section. Generally the following recommendations apply:

100 P (800 W) used for fast cooking or reheating e.g. soup, casseroles, canned food, hot beverages, vegetables, fish, etc.

70 P (560 W) used for longer cooking of dense foods such as roast joints, meat loaf and plated meals, also for sensitive dishes such as cheese sauce and sponge cakes. At this reduced setting, the sauce will not boil over and food will cook evenly without over cooking at the sides.

50 P (400 W) for dense foods which require a long cooking time when cooked conventionally, eg. beef dishes, it is advisable to use this power setting to ensure the meat will be tender.

30 P (240 W Defrost setting) to defrost, select this power setting, to ensure that the dish defrosts evenly. This setting is also ideal for simmering rice, pasta, dumplings and cooking egg custard.

10 P (80 W) For gentle defrosting, eg. cream gateaux or pastry.

P = PERCENTAGE

To set the microwave power level :

Rotate the **TIMER/WEIGHT/POWER** knob clockwise to select cooking time.

Press the **COOKING MODE** button once (microwave only).

To change the microwave power level rotate the knob until the desired power level is reached.

Press the **START/+ 1 MIN** button.

NOTE: If the power level is not selected, 100 P is automatically set.

MICROWAVE COOKING




Your oven can be programmed for up to 90 minutes. (90.00) The input unit of cooking (defrosting) time varies from 10 seconds to five minutes. It depends on the total length of the cooking (defrosting) time as shown on the table.

Cooking time	Increasing unit
0-5 minutes	10 seconds
5-10 minutes	30 seconds
10-30 minutes	1 minute
30-90 minutes	5 minutes

Example:

Suppose you want to heat soup for 2 minutes and 30 seconds on 70 P microwave power.

1. Enter desired cooking time by rotating **TIMER/WEIGHT/POWER** knob clockwise.
2. Choose desired cooking mode by pressing **COOKING MODE** button once (microwave only).
3. Choose desired power by rotating the **TIMER/WEIGHT/POWER** knob clockwise.
4. Press **START/+ 1 MIN** button once to begin cooking.

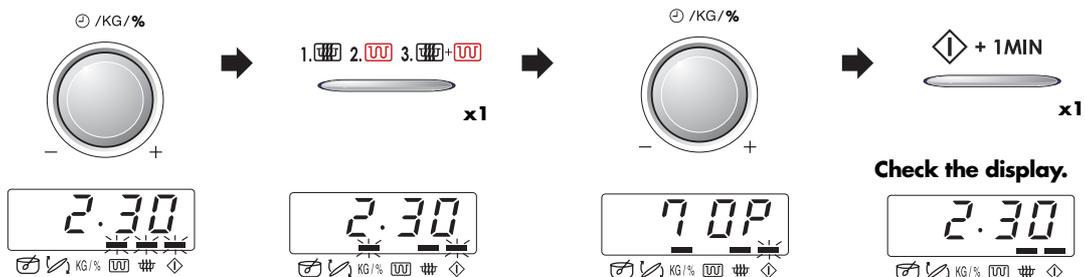

NOTES:

1. When the door is opened during the cooking process, the cooking time on the digital display stops automatically. The cooking time starts to count down again when the door is closed and the **START/+ 1 MIN** button is pressed.
2. If you wish to know the power level during cooking, press the **COOKING MODE** button. As long as your finger is touching the **COOKING MODE** button, the power level will be displayed.
3. You can rotate the **TIMER/WEIGHT/POWER** knob clockwise or counter-clockwise. If you rotate the knob counter-clockwise, the cooking time will decrease from 90 minutes by degrees.



GRILL COOKING/DUAL GRILL COOKING


This microwave oven has two **GRILL** cooking modes: 1. Grill only. 2. Dual Grill (Grill with microwave).

1. GRILL ONLY COOKING

This mode can be used to Grill/Brown food.

Example : To make toast for 4 minutes.

1. Enter desired cooking time by rotating the **TIMER/WEIGHT/POWER** knob.
2. Choose the desired cooking mode by pressing the **COOKING MODE** button twice. (Grill only).
3. Press the **START/+1MIN** button once to begin cooking.

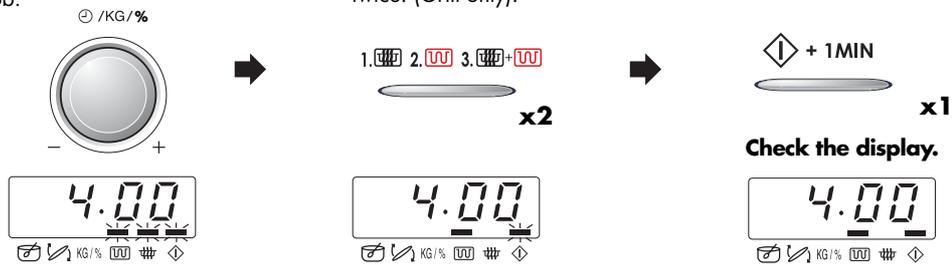

NOTES:


1. The rack is recommended for grilling of flat pieces of food.
2. You may detect smoke or a burning smell when using the grill for the first time, this is normal and not a sign that the oven is out of order.
To avoid this problem, when first using the oven, operate the grill without food for 20 minutes.

2. DUAL GRILL COOKING

This mode uses a combination of Grill power and Microwave power (10 P to 50 P).
The Microwave power level is preset to 30 P.

Example:

To cook kebabs (as per recipe page 35 in the Cookbook section) for 7 minutes on **DUAL GRILL 50 P**.

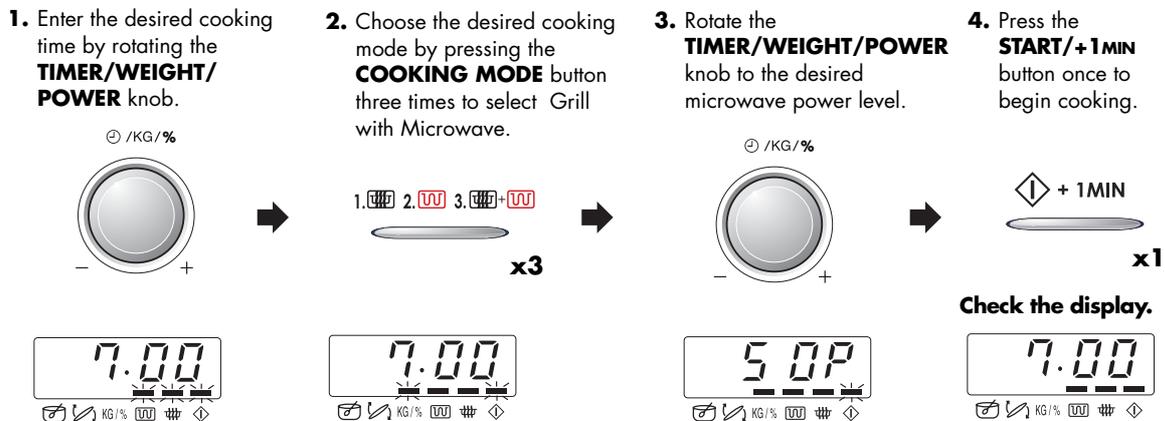

OTHER CONVENIENT FUNCTIONS



1. MULTIPLE SEQUENCE COOKING


A sequence of 3 stages (maximum) can be programmed using combinations of **MICROWAVE**, **GRILL** or **DUAL GRILL**.

Example:

To cook : 2 minutes and 30 seconds on 70 P power (Stage 1)
5 minutes Grill only (Stage 2)


STAGE 1

1. Enter the desired cooking time by rotating the **TIMER/WEIGHT/POWER** knob clockwise.
2. Choose the desired cooking mode by pressing the **COOKING MODE** button once (microwave only).
3. Enter the desired power level by rotating the **TIMER/WEIGHT/POWER** knob clockwise.
4. Press the **COOKING MODE** button before programming Stage 2.

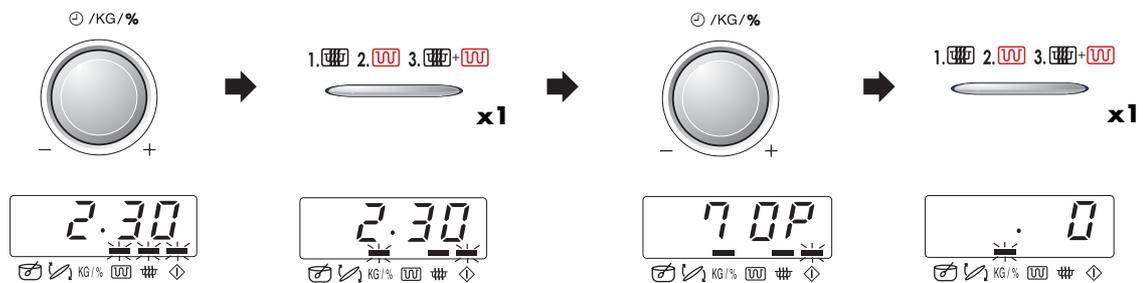

STAGE 2

5. Enter desired time by rotating the **TIMER/WEIGHT/POWER** knob clockwise.
6. Choose the desired cooking mode by pressing the **COOKING MODE** button twice (Grill only).
7. Press the **START/+ 1 MIN** button once to begin cooking.

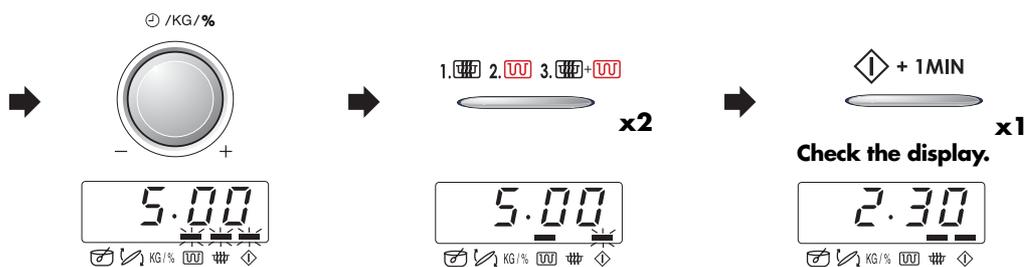

(The oven will begin to cook for 2 minutes and 30 seconds at 70 P, and then for 5 minutes on Grill only).

NOTE: If you set any programme after setting **GRILL** mode, omit the steps 3 and 4.
If you press the **COOKING MODE** button continually after setting **GRILL** mode, the **GRILL** mode will be changed to the **DUAL GRILL** mode automatically.

Example:

To cook Courgette & Macaroni Bake (page 33, Cookbook section).

1. 25 minutes at 100 P.
2. 5 minutes Dual Grill at 50 P.



OTHER CONVENIENT FUNCTIONS

2. MINUTE PLUS FUNCTION

The **START/+ 1 MIN** button allows you to operate the two following functions:

a. Direct start

You can directly start cooking on 100 P microwave power level for 1 minute by pressing the **START/+ 1 MIN** button.



NOTE:

To avoid the misuse by children the **START/+ 1 MIN** button can be used only within 3 minutes after preceding operation, i.e., closing the door, pressing the **STOP** button or cooking completion.

b. Extend the cooking time.

You can extend the cooking time during manual cooking for multiples of 1 minute if the **START/+ 1 MIN** button is pressed while the oven is in operation.

3. TO CHECK THE POWER LEVEL

To check the microwave power level during cooking press the **COOKING MODE** button.

1. 2. 3. +



As long as your finger is touching the **COOKING MODE** button the power level will be displayed.

The oven continues to count down although the display shows the power level.

AUTOMATIC OPERATION



The **AUTOMATIC** function automatically works out the correct cooking mode and cooking time. You can choose from 8 **AUTOCOOK** menus and 4 **AUTO DEFROST** menus. What you need to know when using this automatic function:

1. Press the **AUTOMATIC** button once, the display will appear as shown.
The menu can be chosen by pressing the **AUTOMATIC** button until the desired menu number is displayed. See pages 16 - 18 "**AUTOMATIC** charts".
To select a defrost menu, press the **AUTOMATIC** button at least 9 times. If you press the button 9 times, **Rd - 1** will appear in the display. The menu will be changed automatically by holding down the **AUTOMATIC** button.
2. The weight of the food can be input by rotating the **TIMER/WEIGHT/POWER** knob until the desired weight is displayed.
 - Enter the weight of the food only. Do not include the weight of the container.
 - For food weighing more or less than weights given in the **AUTOMATIC** charts, use manual programmes. For best results, follow the cooking charts in the cookbook section.
3. To start cooking press **START/+ 1 MIN** button.

When action is required (e.g. to turn food over), the oven stops and the audible signals sound, remaining cooking time and any indicator will flash on the display. To continue cooking, press the **START/+ 1 MIN** button.

1.

AUTOMATIC



x1


AUTOMATIC button



Menu number

2.

⊖ /KG/%

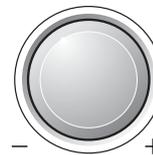

TIMER/WEIGHT/POWER knob

3.

⏏ + 1MIN




START/+ 1 MIN button

The final temperature will vary according to the initial food temperature. Check food is piping hot after cooking. If necessary, you can extend the cooking manually.

Example:

To cook grill skewers weighing 0,2 kg using **AUTOCOOK** AC-2.

1. Select the menu required by pressing the **AUTOMATIC** button twice.
2. Enter the weight by rotating the **TIMER/WEIGHT/POWER** knob.
3. Press the **START/+ 1 MIN** button once.

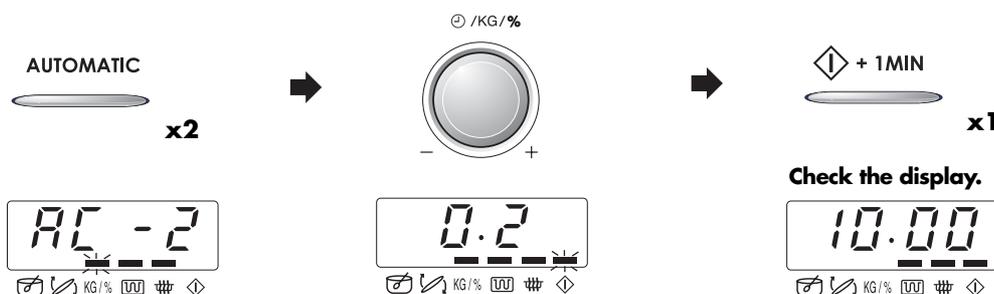



AUTOMATIC CHARTS

BUTTON	MENU NO.	WEIGHT (Increasing Unit)/ UTENSILS	PROCEDURE
AUTOMATIC  x1	AC-1 Cook French Fried Potatoes (recommended for conventional ovens) 	0,1 - 0,3 kg (50 g) (initial temp -18° C) Flan dish Rack	<ul style="list-style-type: none"> Remove the frozen french fried potatoes from the package and place them in a flan dish. Place the dish on the rack in the oven. When audible signal sounds, turn over. After cooking, remove from the dish and put on a plate for serving. (No standing time is necessary). Add salt to taste. <p>NOTE: The dish gets very hot during cooking. To avoid burning yourself, please use oven gloves for removing the pan from the oven.</p>
AUTOMATIC  x2	AC-2 Cook Grill Skewers 	0,2 - 0,6 kg (100 g) (initial temp 5° C) Rack	<ul style="list-style-type: none"> Prepare the grill skewers referring to the recipe on page 33 of the Cookbook. Place on a rack and cook. When the audible signal sounds, turn over. After cooking, remove and put on a plate for serving. (No standing time necessary).
AUTOMATIC  x3	AC-3 Cook Chicken Legs  Ingredients for 0,6 kg chicken legs: 3 pieces, 1-2 tbsp oil, 1/2 tsp salt, 1 tsp sweet paprika, 1 tsp rosemary	0,2 - 0,6 kg (50 g) (initial temp 5° C) Rack	<ul style="list-style-type: none"> Mix the ingredients and spread on the chicken legs. Pierce the skin of the chicken legs. Put the chicken legs on the rack, skin side down, with the thin ends towards the centre. When audible signal sounds, turn over. After cooking, remove and stand for approx. 5 minutes.
AUTOMATIC  x4	AC-4 Cook Grilled Chicken  Ingredients for 1,2 kg grilled chicken: Salt and Pepper, 1 tsp sweet paprika, 2 tbsp oil	0,9 - 1,4 kg (100 g) (initial temp 5° C) Saucer Flan Dish	<ul style="list-style-type: none"> Mix the ingredients and spread on the chicken. Pierce the skin of the chicken. Put chicken breast side down on an upturned saucer in a flan dish. Place directly on the turntable and cook. When audible signal sounds, turn over. After cooking, leave for approx. 3 minutes in the oven, remove and put on a plate for serving.
AUTOMATIC  x5	AC-5 Cook Fresh Vegetables 	0,1 - 0,6 kg (100 g) (initial temp 20° C) Bowl & lid	<ul style="list-style-type: none"> Cut into small pieces, eg. strips, cubes or slices. Add 1 tbsp water per 100 g and salt as desired. (For mushrooms no additional water is necessary). Cover with a lid. When audible signal sounds, stir and re-cover. After cooking, let the food stand for approx 2 minutes.

AUTOMATIC CHARTS



BUTTON	AUTO COOK NO.	WEIGHT (Increasing Unit)/ UTENSILS	PROCEDURE
AUTOMATIC  x6	AC-6 Cook Boiled Potatoes Jacket Potatoes 	0,1 - 0,8 kg (100 g) (initial temp 20° C) Bowl & lid	Boiled Potatoes: Peel the potatoes and cut them into similar sized pieces. Jacket Potatoes: Choose potatoes of similar size and wash them. <ul style="list-style-type: none"> Put the boiled or jacket potatoes into a bowl. Add the required amount of water (per 100 g), approx 2 tbsp and a little salt. Cover with a lid When audible signal sounds, stir and re-cover. After cooking, let the potatoes stand for approx. 2 minutes.
AUTOMATIC  x7	AC-7 Cook Gratinated Fish Fillet 	0,6 - 1,2 kg* (100 g) (initial temp Fish 5° C) Gratin dish	<ul style="list-style-type: none"> See recipes for Gratinated Fish Fillet on pages 18-19. * Total weight of all ingredients.
AUTOMATIC  x8	AC-8 Cook Gratin 	0,5 - 1,5 kg* (100 g) (initial temp 20° C) Gratin dish	<ul style="list-style-type: none"> See recipes for Gratin on page 19. * Total weight of all ingredients.

BUTTON	AUTO DEFROST NO.	WEIGHT (Increasing Unit)/ UTENSILS	PROCEDURE
AUTOMATIC  x9	Ad-1 Defrost Steak, Chops 	0,2 - 0,8 kg (100 g) (initial temp -18° C) (See note on page 18)	<ul style="list-style-type: none"> Place the food in a flan dish in the centre of the turntable. When the audible signal sounds, turn the food over, rearrange and separate. Shield thin parts and warm spots with small pieces of aluminium foil. After defrosting, wrap in aluminium foil for 10 - 15 minutes, until thoroughly defrosted.
AUTOMATIC  x10	Ad-2 Defrost Minced Meat 	0,2 - 0,8 kg (100 g) (initial temp -18° C) (See note on page 18)	<ul style="list-style-type: none"> Place the block of minced meat in a flan dish in the centre of the turntable. When the audible signal sounds, turn the food over. Remove the defrosted parts if possible. After defrosting, cover with aluminium foil and stand for 5 - 10 minutes, until thoroughly defrosted.
AUTOMATIC  x11	Ad-3 Defrost Cake 	0,1 - 1,4 kg (100 g) (initial temp -18° C) Flat dish	<ul style="list-style-type: none"> Remove all packaging from the cake. Place directly on the turntable, or on a plate in the middle of the turntable. After defrosting, cut the cake into similar sized pieces keeping space between each piece and let stand for 10 - 30 minutes until evenly defrosted.



AUTOMATIC CHARTS

BUTTON	AUTO DEFROST NO.	WEIGHT (Increasing Unit)/ UTENSILS	PROCEDURE
AUTOMATIC  x12	Ad-4 Defrost Bread 	0,1 - 1,0 kg (100 g) (initial temp -18° C) Flat dish (Only sliced bread is recommended for this programme.)	<ul style="list-style-type: none"> Distribute in a flan dish in the centre of the turntable. For 1,0 kg distribute directly on the turntable. When the audible signal sounds, turn over, re-arrange and remove defrosted slices. After defrosting cover in aluminum foil and stand for 5 - 15 minutes, until thoroughly defrosted.

NOTES: Auto Defrost

- Steaks and Chops should be frozen in one layer.
- Minced meat should be frozen in a thin shape.
- After turning over, shield the defrosted portions with small, flat pieces of aluminium foil.



RECIPES FOR AUTOMATIC AC-7 & AC-8

GRATINATED FISH FILLET (AC-7)

Fish gratin Italian style

Ingredients

0,6 kg	0,9 kg	1,2 kg	
260 g	390 g	520 g	fish fillet
1/2 tbsp	1 tbsp	1 1/2 tbsp	lemon juice
1/2 tbsp	1 tbsp	1 1/2 tbsp	anchovy butter
30 g	45 g	60 g	Gouda (grated)
			salt and pepper
180 g	270 g	360 g	fresh tomatoes
1 tbsp	1 1/2 tbsp	2 tbsp	chopped mixed herbs
110 g	165 g	220 g	Mozarella
1/2 tbsp	3/4 tbsp	1 tbsp	basil (chopped)

Preparation

- Wash and dry the fish and sprinkle with lemon juice, salt and grease with anchovy butter.
- Place in a gratin dish.
- Sprinkle the Gouda over the fish.
- Wash the tomatoes and remove the stalk-spore. Cut into slices and place on top of the cheese.
- Season with salt, pepper and the mixed herbs.
- Drain the Mozarella, cut into slices and place on the tomatoes. Sprinkle the basil over the cheese.
- Place the gratin dish on the turntable and cook on **AUTOMATIC COOK AC-7**, "Gratinated fish fillet".
- After cooking let stand for approx. 5 minutes.

RECIPES FOR AUTOMATIC AC-7 & AC-8



GRATINATED FISH FILLET (AC-7)

Fish esterhazy

Ingredients

0,6 kg	0,9 kg	1,2 kg	
270 g	400 g	540 g	fish fillet
120 g	180 g	240 g	leeks (cut into rings)
24 g	36 g	48 g	onion (finely sliced)
60 g	90 g	120 g	carrot (grated)
10 g	10 g	10 g	butter or margarine
			salt, pepper and nutmeg
1 tbsp	1 1/2 tbsp	2 tbsp	lemon juice
60 g	90 g	120 g	crème fraîche
60 g	90 g	120 g	Gouda (grated)

Preparation

- Put vegetables, butter and the spices into a casserole dish and mix well. Cook for 2-6 minutes on 100 P depending on weight.
- Wash the fish, dry and sprinkle with lemon juice and salt.
- Mix the crème fraîche with the vegetables and season again.
- Put half of the vegetables in a gratin dish. Place the fish on top and cover with the remaining vegetables.
- Spread the Gouda over the top, place on the turntable and cook on **AUTOMATIC COOK AC-7**, "Gratinated Fish Fillet".
- After cooking let stand for approx. 5 minutes.

GRATIN (AC-8)

Spinach gratin

Ingredients

0,5 kg	1,0 kg	1,5 kg	
150 g	300 g	450 g	leaf spinach (defrosted, drained)
15 g	30 g	45 g	onion (finely chopped)
			salt, pepper, nutmeg
150 g	300 g	450 g	boiled potatoes (sliced)
35 g	75 g	110 g	cooked ham (diced)
50 g	100 g	150 g	crème fraîche
1	2	3	eggs
40 g	75 g	115 g	grated cheese

Preparation

- Mix together the leaf spinach with the onion and season with salt, pepper and nutmeg.
- Grease the gratin dish. Place alternate layers of potato slices, diced ham and spinach in the dish. The top layer should be spinach.
- Mix the eggs with crème fraîche, add salt and pepper and pour over the vegetables.
- Cover the gratin with the grated cheese.
- Place on the turntable and cook on **AUTOMATIC COOK AC-8**, "Gratin".
- After cooking, let stand for 5-10 minutes.

GRATIN (AC-8)

Potato-courgette-gratin

Ingredients

0,5 kg	1,0 kg	1,5 kg	
200 g	400 g	600 g	boiled potatoes (sliced)
115 g	230 g	345 g	courgette (finely sliced)
75 g	150 g	225 g	crème fraîche
1	2	3	eggs
1/2	1	1 1/2	clove of garlic (crushed)
			salt, pepper
40 g	75 g	115 g	grated Gouda cheese
			sunflower kernel

Preparation

- Grease the gratin dish and place alternate layers of potato slices and courgette in the dish.
- Mix the eggs with crème fraîche, season with salt, pepper and garlic and pour over the vegetables.
- Cover the gratin dish with the grated Gouda cheese.
- Finally sprinkle the gratin with sunflower kernel.
- Place on the turntable and cook on **AUTOMATIC COOK AC-8**, "Gratin".
- After cooking, let stand for 5-10 minutes.



CARE AND CLEANING

Caution

Do not use commercial oven cleaners, abrasive harsh cleaners or scouring pads on any part of your microwave oven.

Oven exterior

The outside of your oven can be easily cleaned with mild soap and water. Make sure that the soap is wiped off with a moist cloth, and dry the exterior with a soft towel.

Control panel

Open the door before cleaning to de-activate the control panel. Care should be taken in cleaning the control panel. Using a cloth dampened with water only, gently wipe the panel until it becomes clean. Avoid using excessive amounts of water. Do not use any sort of chemical or abrasive cleaner.

Oven Interior

1. For cleaning, wipe any spatters or spills with a soft damp cloth or sponge after each use while the oven is still warm. For heavier spills, use mild soap and wipe several times with a damp cloth until all residues are removed.

2. Make sure that mild soap or water do not penetrate the small vents in the walls which may cause damage to the oven.
3. Do not use spray type cleaners on the oven interior.
4. Heat up your oven regularly by using the grill, refer to note 2 on page 10. Remaining food or fat splashed can cause smoke or a bad smell.

Turntable and Roller stay

Remove the turntable and roller stay from the oven. Wash the turntable and roller stay in mild soapy water. Dry with a soft cloth. Both the turntable and the roller stay are dishwasher safe.

Door

To remove all trace of dirt, regularly clean both sides of the door, the door seals and surfaces with a soft, damp cloth.

Rack

This should be washed in a mild washing up liquid solution and dried. The rack is dishwasher safe.



SERVICE CALL CHECK

Please check the following before calling for service.

1. Power Supply

Check the power plug is properly connected to a suitable wall outlet.

Check the line fuse/circuit breaker is functioning properly.

2. When the door is opened, does the oven lamp light? YES _____ NO _____

3. Place a cup of water (approx. 150 ml) in the oven and close the door securely. Programme the oven for one minute on 100 P power and start the oven.

Does the oven lamp come on? YES _____ NO _____

Does the turntable rotate? **NOTE:** The turntable turns in either direction. YES _____ NO _____

Does the ventilation work? (You will hear the fan sound.) YES _____ NO _____

After 1 minute does the signal sound? YES _____ NO _____

Does cooking in progress indicator go off? YES _____ NO _____

Is the cup with water warm after the above operation? YES _____ NO _____

4. Programme the grill for three minutes and start the oven. After 3 minutes does the grill heating element become red? YES _____ NO _____

If "NO" is the answer to any of the above questions, call your dealer or an authorised SHARP Service Agent and report the results of your check.

NOTE: If you cook the food over the standard time with only the same cooking mode, the power of the oven will lower automatically to avoid overheating. (The microwave power level will be reduced or the grill heating element will begin to light on and off).

Cooking Mode	Standard time
Microwave (100 P)	20 minutes
Grill	10 minutes
Dual Grill	Grill - 10 minutes

WHAT ARE MICROWAVES?



Microwaves are generated in the microwave oven by a magnetron and cause the water molecules in the food to oscillate. Heat is generated by the friction which is caused, with the result that the food is thawed, heated or cooked.

SUITABLE OVENWARE, TIPS AND ADVICE



GLASS AND CERAMIC GLASS



Heat-resistant glass utensils are very suitable. The cooking process can be observed from all sides. They must not, however, contain any metal (e.g. lead crystal), nor have a metallic overlay (e.g. gold edge, cobalt blue finish).



CERAMICS

Generally very suitable. Ceramics must be glazed, since with unglazed ceramics moisture can get into the ceramic. Moisture causes the material to heat up and may make it shatter. If you are not certain whether your utensil is suitable for the microwave, carry out the utensil suitability test. (See page 22).

PLASTIC AND PAPER CONTAINERS



Plastic or paper containers which are designed for microwaves and which can withstand heat are suitable for defrosting, heating and cooking. Please follow manufacturers' instructions.

KITCHEN PAPER

can be used to absorb any moisture which occurs in short heating methods, e.g. of bread or products in bread crumbs. Insert the paper between the food and the revolving plate. The surface of the food will stay crispy and dry. Covering greasy food with kitchen paper will catch splashes.

MICROWAVE FOIL

This, or heat-resistant foil, is very suitable for covering or wrapping. Please follow the manufacturer's recommendations.

ROASTING BAGS

Can be used in a microwave oven. Metal clips are not suitable for fastening them since the roasting bag foil might melt. Fasten the roasting bag with

string and pierce it several times with a fork. Non heat-resistant food wraps are not recommended for use in a microwave oven.

BROWNING DISH

A special microwave dish made from ceramic glass with a metal alloy base, which allows food to be browned. When using the browning dish a suitable insulator, e.g. a porcelain plate, must be placed between the turntable and the browning dish. Be careful to adhere exactly to the pre-heating time given in the manufacturer's instructions. Excessive pre-heating can damage the turntable and the turntable stand or can trigger the safety-device which will switch off the oven.



METAL

Generally speaking, metal should not be used, since microwaves do not pass through metal and therefore cannot reach the food. There are, however, exceptions: small strips of aluminium foil may be used to cover certain parts of the food, so that these do not thaw too quickly or begin to cook (e.g. chicken wings). Small metal skewers and aluminium containers (e.g. of readycooked meals) can be used.



They must, however, be small in relation to the food, e.g. aluminium containers must be at least $\frac{2}{3}$ to $\frac{3}{4}$ filled with food. It is recommended that you transfer the food into a dish suitable for use in the microwave. When using aluminium containers or other metal utensils there must be a gap of approx. 2 cms between them and the walls of the cooking area, otherwise the walls could be damaged by possible arcing.



SUITABLE OVENWARE, TIPS AND ADVICE

NO UTENSIL SHOULD HAVE A METAL overlay, or metal parts such as screws, bands or handles..

UTENSIL SUITABILITY TEST

If you are not sure whether your utensil is suitable for use in your microwave oven, carry out the following test: Place the utensil into the oven. Place a glass container filled with 150 ml of water on or next to the utensil. Switch on the oven at 100 P power for 1 to 2 minutes. If the utensil stays cool or just warm to the touch, it is suitable. Do not use this test on a plastic utensil. It could melt.



GRILL FUNCTION

You can use any heat-resistant container for the roasting/grilling function which is suitable for conventional roasting methods, e.g. china, ceramic, glass and metal containers.

In microwave cooking which requires the dish to be roasted or grilled, or when using the combined function, the containers must be suitable for microwaves and heat-resistant. Suitable containers are, for example, heat-resistant glass and ceramic containers.

BEFORE YOU START...

To make it as easy as possible to use the microwave oven we have put together a few hints and tips for you. Only switch on the oven when the food is already inside.

SETTING THE COOKING TIME

Defrosting, re-heating and cooking times are generally much shorter than in a conventional oven or hob. So you will need to consult this book for the recommended cooking times. It is better to set shorter rather than longer cooking times. Always test the food after the cooking time has elapsed. It is better then to continue cooking it for a little longer, than to have overcooked food.

INITIAL TEMPERATURES

Thawing, heating and cooking times are dependent upon the initial temperature of the food. Deep-frozen food and food stored in a refrigerator, for example, requires longer than food which has been stored at room temperature. For heating and cooking, normal storage temperatures are assumed (refrigerator temperature approx. 5° C, room temperature approx. 20° C). For thawing the temperature of the deep freeze is assumed to be -18° C.

COOKING TIMES

All the times given in this cookery book are guidelines, which can be varied according to the initial temperature, weight and condition of the food (water or fat content etc.).

USING A FOOD THERMOMETER TO DETERMINE COOKING TIME

Once cooked, every drink and every foodstuff has a certain internal temperature at which the cooking process can be switched off and the food will be cooked. The internal temperature can be ascertained with a food thermometer. The most important temperatures are specified in the temperature table.

Drink / Food	Internal temperature once cooked	Internal temp. after 10 - 15 mins standing time
Heating drinks (Coffee, Water, Tea, etc.)	65-75° C	
Heating milk	60-65° C	
Heating soup	75-80° C	
Heating stew	75-80° C	
Poultry	80-85° C	85-90° C
Lamb		
Pink	70° C	70-75° C
Well done	75-80° C	80-85° C
Roast beef		
Rare	50-55° C	55-60° C
Medium	60-65° C	65-70° C
Well done	75-80° C	80-85° C
Pork, Veal	80-85° C	80-85° C

ADDITION OF WATER

Vegetables and other foods with a high water content can be cooked in their own juice or with the addition of a little water. This ensures that many vitamins and minerals are preserved.

FOOD IN SKINS OR SHELLS

Foods such as sausages, chickens, chicken legs, baked potatoes, tomatoes, apples, egg yolks or such like should be pricked or pierced with a fork or small wooden skewer. This will enable the steam which forms to dissipate without splitting the skin or shell.

TIPS AND ADVICE

**FATTY FOODS**

Fatty meat and layers of fat cook better than lean portions of meat. Before cooking, cover the fatty portions with a piece of aluminium foil or place the food with the fat side down.

BLANCHING VEGETABLES

Before freezing vegetables, they should be blanched. This preserves the quality and flavour at their best. Method: wash and chop the vegetables. Put 250 g of vegetables in a dish with 275 ml water and cover. Heat for 3-5 minutes. After blanching, immerse immediately in cold water to prevent further cooking and then allow to drain. Pack vegetables in an airtight container and freeze.

PRESERVING FRUIT AND VEGETABLES

Using the microwave for preserving is quick and easy. There are preserving jars, rubber vacuum seals and suitable seals made of plastic available specially made for microwaves.




The manufacturers will supply precise instructions for use.

LARGE AND SMALL QUANTITIES

Microwave times are directly dependent upon the amount of food which you would like to thaw, heat or cook. This means that small portions cook more quickly than larger ones. As a rule of thumb:
TWICE THE AMOUNT = ALMOST TWICE THE TIME
HALF THE AMOUNT = HALF THE TIME

DEEP AND SHALLOW CONTAINERS


Both containers have the same capacity, but the cooking time is longer for the deeper one. You should therefore choose as flat a container as possible with a large surface area. Only use deep containers for dishes where there is a danger of overcooking, e.g. for noodles, rice, milk etc..

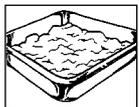**ROUND AND OVAL CONTAINERS**

Food cooks more evenly in round or oval containers than in containers with corners, since the microwave energy concentrates in the corners and the food in these areas could become overcooked.

COVERING

Covering the food retains the moisture within it and shortens the cooking time. Use a lid, microwave foil or a cover. Foods which are to be crispy, e.g. roasts or chickens, should not be covered. As a general rule, whatever would be covered in a conventional oven should also be covered in a microwave oven. Whatever would be uncovered in an ordinary oven can also be left uncovered in a microwave oven.

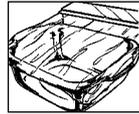**IRREGULAR SHAPED FOOD**

Place the thicker, more compacted end of the food pointing towards the outside. Place vegetables (such as broccoli) with the stalks pointing outward.

**STIRRING**

Stirring the food is necessary, since the microwaves begin by heating the outer areas. The temperature is thereby equalised and the food heats up evenly.

**ARRANGEMENT OF FOOD**

Place a number of individual portions, such as small pudding moulds, cups or potatoes in their jackets, in a circle on the turntable. Keep the portions at a distance from each other so that the microwave energy can reach the food from all sides.

TURNING

Medium-sized items, such as hamburgers and steaks, should be turned over once during cooking, in order to shorten the cooking process. Large items, such as roasts and chickens, must be turned, since the upper side receives more microwave energy and could dry out if not turned.

STANDING TIME

Keeping to the standing time is one of the most important rules with microwaves. Almost all foods, which are thawed, heated or cooked in the microwave, require a certain amount of time to stand, during which temperature equalisation takes place and the moisture in the food is evenly distributed.





HEATING

Details for this can be found in the table: Heating food and drink (see page 26).

- Ready-prepared meals in aluminium containers should be removed from the aluminium container and heated on a plate or in a dish..
- Remove the lids from firmly closed containers.
- Food should be covered with microwave foil, a plate or cover (obtainable from stores), so that the surface does not dry out. Drinks need not be covered.
- When boiling liquids such as water, coffee, tea or milk, place a glass stirrer in the container.

- If possible, stir large quantities from time to time, to ensure that the temperature is evenly distributed.
- The times are for food at a room temperature of 20° C. The heating time for food stored in a refrigerator should be increased slightly.
- After heating allow the food to stand for 1-2 minutes, so that the temperature inside the food can be evenly distributed (standing time).
- The times given are guidelines which can be varied according to the initial temperature, weight, water content, fat content or the result which you wish to achieve.



DEROSTING

Details for this can be found in the table: Defrosting (see page 27). Your microwave is ideal for thawing. Thawing times are usually considerably shorter than in traditional methods. Here are a few tips. Take the frozen item out of its packaging and place on a plate for thawing.

BOXES AND CONTAINERS

Boxes and containers suitable for microwaves are particularly good for thawing and heating food, since they can withstand temperatures in a deep freeze (down to approx. -40° C) as well as being heat-resistant (up to approx. 220° C). You can therefore use the same container to freeze, thaw, heat and even cook the food, without having to transfer it.

COVERING



Cover thin parts with small strips of aluminium foil before thawing. Thawed or warm parts should likewise be covered with aluminium strips during thawing. This stops the thin parts becoming too hot while thicker parts are still frozen.

CORRECT SETTING

It is better to choose a setting which is too low rather than one which is too high. By so doing you will ensure that the food thaws evenly. If the microwave setting is too high, the surface of the food will already have begun to cook while the inside is still frozen.

TURNING/STIRRING



Almost all foods have to be turned or stirred from time to time. As early as possible, separate parts which are stuck together and rearrange them.

SMALL AMOUNTS...

thaw more quickly and evenly than larger ones. We recommend that you freeze portions which are as small as possible. By so doing you will be able to prepare whole menus quickly and easily.

FOODS REQUIRING CAREFUL HANDLING,

Foods such as gateaux, cream, cheese and bread should only be partially thawed and then left to thaw completely at room temperature. By so doing you will avoid the outer areas becoming too hot while the inside is still frozen.

STANDING TIME

This is particularly important after thawing food, as the thawing process continues during this period. In the thawing table you will find the standing times for various foods. Thick, dense foods require a longer standing time than thinner foods or food of a porous nature. If the food has not thawed sufficiently, you may continue thawing it in the microwave oven or lengthen the standing time accordingly. At the end of the standing time you should process the food as soon as possible and not re-freeze it.

COOKING FRESH VEGETABLES



Details for this can be found in the table: Cooking fresh vegetables (see page 28).

- When buying vegetables try to ensure that, as far as possible, they are of similar size. This is particularly important when you want to cook the vegetables whole (e.g. boiled potatoes).
- Wash the vegetables before preparing them, clean them and only then weigh the required quantity for the recipe and chop them up.
- Season them as you would normally, but as a rule only add salt after cooking.
- Add about 5 tbsps of water for 500 g of vegetables. Vegetables which are high in fibre require a little more water. You will find information about this in the table.
- Vegetables are usually cooked in a dish with a lid. Those with a high moisture content, e.g. onions or boiled potatoes, can be cooked in microwave foil without adding water.
- After half the cooking time has elapsed vegetables should be stirred or turned over.
- After cooking allow the vegetables to stand for approx. 2 minutes, so that the temperature disperses evenly (standing time).
- The cooking times given are guidelines and depend upon the weight, initial temperature and condition of the type of vegetable in question. The fresher the vegetables, the shorter the cooking times.

COOKING GRILLING AND BROWNING



Details for this can be found in the table: Cooking, grilling and browning (see page 29).

- When buying food items, try to ensure that, as far as possible, they are of similar size. This will ensure that they are cooked properly.
- Before preparation wash meat, fish and poultry thoroughly under cold running water and pat them dry with kitchen paper. Then continue as normal.
- Beef should be well hung and have little gristle.
- Even though the pieces may be of a similar size, cooking results may vary. This is due, amongst other things, to the kind of food, variations in the fat and moisture content as well as the temperature before cooking.
- Turn large pieces of meat, fish or poultry half way through the cooking time, so that they are cooked evenly from all sides.
- After cooking cover roasts with aluminium foil and allow them to stand for approx. 10 minutes (standing time). During this period the roast carries on cooking and the liquid is evenly distributed, so that when it is carved a minimum amount of juice is lost.

DEFROSTING AND COOKING



Deep-frozen dishes can be thawed and cooked at the same time in one process in your microwave. You will find some examples in the table. Do take note, however, of the general advice given on "heating" and "thawing" food.

Please refer to the manufacturer's instructions on the packaging when preparing deep-frozen dishes. These usually contain precise cooking times and offer advice on preparation.



TABLES

TABLE : HEATING FOOD AND DRINK

Food/Drink	Quantity -g-	Setting	Power -Level-	Time -min-	Method
Coffee, 1 cup	150	☛	100 P	approx. 1	Do not cover
Milk, 1 cup	150	☛	100 P	approx. 1	Do not cover
Water, 1 cup	150	☛	100 P	1 ¹ / ₂ -2	Do not cover, bring to the boil
6 cups	900	☛	100 P	10-12	Do not cover, bring to the boil
1 dish	1000	☛	100 P	11 ¹ / ₂ -13	Cover, bring to the boil
One-plate meal (Vegetables, Meat and side dishes)	400	☛	100 P	3-6	Sprinkle sauce with water, cover, stir half way through cooking time
Stew	200	☛	100 P	1 ¹ / ₂ -2 ¹ / ₂	Cover, stir after heating
Soup, clear	200	☛	100 P	1 ¹ / ₂ -2	Cover, stir after heating
Cream soup	200	☛	100 P	1 ¹ / ₂ -2 ¹ / ₂	Cover, stir after heating
Vegetables	200	☛	100 P	2-2 ¹ / ₂	Add water if necessary, cover, stir half way through cooking time
	500	☛	100 P	4-5	way through cooking time
Side dishes	200	☛	100 P	2-2 ¹ / ₂	Sprinkle with a little water, cover, stir half way through cooking time
	500	☛	100 P	4-4 ¹ / ₂	way through cooking time
Meat, 1 slice ¹	200	☛	100 P	3-4	Sprinkle with a little sauce, cover
Fish fillet	200	☛	100 P	2-3	Cover
Sausages, 2 pieces	180	☛	100 P	approx. 2	Prick skin several times
Cake, 1 slice	150	☛	50 P	1 ¹ / ₂	Place on a plate
Baby food, 1 jar	190	☛	50 P	approx. 1	Remove lid, stir well after heating Check the temperature
Melting Margarine or Butter	50	☛	100 P	1 ¹ / ₂ -1	
Melting chocolate	100	☛	50 P	2-3	Stir during cooking
Dissolving 6 sheets of gelatine	10	☛	50 P	1 ¹ / ₂	Soak in water, squeeze out well and put in soup bowl, stir during cooking
Cake glaze for 1/4 l liquid	10	☛	50 P	5-6	Stir with sugar and 250ml liquid, cover and, stir well during and after cooking

¹ from chilled

TABLE : COOKING AND DEFROSTING

Food (Frozen)	Quantity -g-	Setting	Power -Level-	Time -min-	Adding water -Tbsp-	Method	Standing Time -min-
Fish fillet	300	☛	100 P	10-12	-	Cover	1-2
Trout, 1 piece	250	☛	100 P	5-7	-	Cover	1-2
One-plate meal	400	☛	100 P	9-11	-	Cover, stir after 6 minutes	2
Fresh spinach	300	☛	100 P	6-8	-	Cover, stir once or twice during cooking	2
Broccoli	300	☛	100 P	7-9	3-5 Tbsp	Cover, stir halfway through time	2
Peas	300	☛	100 P	7-9	3-5 Tbsp	Cover, stir halfway through time	2
Kohlrabi	300	☛	100 P	7-9	3-5 Tbsp	Cover, stir halfway through time	2
Mixed veg.	500	☛	100 P	11-13	3-5 Tbsp	Cover, stir halfway through time	2
Brussel sprouts	300	☛	100 P	7-9	3-5 Tbsp	Cover, stir halfway through time	2
Red cabbage	450	☛	100 P	10-12	3-5 Tbsp	Cover, stir halfway through time	2

TABLES



TABLE : DEFROSTING

Food	Quantity -g-	Setting	Power -Level-	Time -min-	Method	Standing time -min-
Meat for roasting (e.g. Pork, Beef, Lamb, Veal)	1500 1000 500	☛ ☛ ☛	10 P 10 P 10 P	58-64 42-48 19-23	Place on an upturned plate, turn over halfway through defrosting	30-90 30-90 30-90
Steaks, Cutlets, Liver	200	☛	30 P	4-5	Turn over halfway through defrosting	10-15
Goulash	500	☛	30 P	8-12	Stir halfway through defrosting	15-30
Sausages, 8 4	600 300	☛ ☛	30 P 30 P	6-9 4-5	Place next to each other, turn over half way through defrosting	5-10 5-10
Duck/Turkey	1500	☛	10 P	48-52	Place on an upturned plate, turn over halfway through defrosting	30-90
Chicken	1200 1000	☛ ☛	10 P 10 P	39-43 33-37	Place on an upturned plate, turn over halfway through defrosting Place on an upturned plate, turn over halfway through defrosting	30-90 30-90
Chicken legs	200	☛	30 P	4-5	Turn over halfway through defrosting	10-15
Fish in pieces	800	☛	30 P	9-12	Turn over halfway through defrosting	10-15
Fish fillet	400	☛	30 P	7-10	Turn over halfway through defrosting	5-10
Crab	300	☛	30 P	6-8	Turn over halfway through defrosting and remove defrosted parts	5
Bread rolls, 2	80	☛	30 P	approx. 1	Only begin to defrost	-
Coarse wholemeal bread in slices	250	☛	30 P	2-4	Place slices next to each other, only begin to defrost	5
Slices of Toast bread						
Mixed flour bread, whole loaf	500	☛	30 P	6-8	Turn over halfway through defrosting (centre will still be frozen)	15
White bread, whole loaf						
Cake, 1 slice	150	☛	10 P	2-5	Place on a plate	5
Cream cake, 1 slice		☛	10 P	3-4	Place on a plate	10
Whole cake, Ø 25 cm		☛	10 P	18-20	Place on a plate. When half defrosted, cut in to slices and leave until cake is fully defrosted	30-60
Cream	200	☛	30 P	2+2	Remove lid. When half defrosted, put in a dish and allow to finish defrosting	5-10
Butter	250	☛	30 P	2-4	Only begin to defrost	15
Fruit e.g. strawberries raspberries, cherries, plums	250	☛	30 P	4-5	Place next to each other, spread out evenly Turn over halfway through defrosting	5

The times shown in the table are guidelines which may vary according to freezing temperature, quality and weight of the foodstuffs.

ABBREVIATIONS USED

tblsp = tablespoon
tsp = teaspoon
Cup = cupful
kg = kilogram
g = gram

l = litre
ml = millilitre
cm = centimetre
DFC = dry fat content
DF = deep frozen

min = minutes
sec = seconds
dm = diameter
app. = approximate
sach. = sachet

ENGLISH



TABLES

TABLE : COOKING FRESH VEGETABLES

Vegetable	Weight -g-	Setting	Power -Level-	Time -Min-	Hints	Added Water tbsps/ml-
Artichokes	300	⌘	100 P	6-8	remove the stalk, cover	3-4 tbsp
Leaf Spinach	300	⌘	100 P	5-7	wash, dry well, cover, stir once or twice during cooking	-
Cauliflower	800	⌘	100 P	15-17	1 whole head, cover, divide into florets	5-6 tbsp
	500	⌘	100 P	10-12	stir during cooking	4-5 tbsp
Broccoli	500	⌘	100 P	9-11	divide into florets, cover, stir occasionally during cooking	4-5 tbsp
Mushrooms	500	⌘	100 P	8-10	whole heads, cover, stir occasionally during cooking	-
Chinese leaves	300	⌘	100 P	9-11	cut into strips, cover, stir occasionally during cooking	4-5 tbsp
Peas	500	⌘	100 P	9-11	cover, stir occasionally during cooking	4-5 tbsp
Fennel	500	⌘	100 P	9-11	cut into quarters, cover, stir occasionally during cooking	4-5 tbsp
Onions	250	⌘	100 P	5-7	whole, cook in microwave foil	-
Carrots	500	⌘	100 P	10-12	cut into rings, cover, stir occasionally during cooking	4-5 tbsp
Green peppers	500	⌘	100 P	7-9	cut into strips, stir once or twice during cooking	4-5 tbsp
Jacket potatoes	500	⌘	100 P	9-11	cover, stir occasionally during cooking	4-5 tbsp
Leeks	500	⌘	100 P	9-11	cut into rings, cover, stir occasionally during cooking	4-5 tbsp
Red cabbage	500	⌘	100 P	15-17	cut into strips, stir once or twice during cooking	50 ml
Brussels sprouts	500	⌘	100 P	9-11	whole sprouts, cover, stir occasionally during cooking	50 ml
Boiled potatoes (salted)	500	⌘	100 P	9-11	cut into large pieces of a similar size, add a little salt, cover, stir occasionally during cooking	150 ml
Celery	500	⌘	100 P	9-11	dice finely, cover, stir occasionally during cooking	50 ml
White cabbage	500	⌘	100 P	15-17	cut into strips, cover, stir occasionally during cooking	50 ml
Courgettes	500	⌘	100 P	9-11	slice, cover, stir occasionally during cooking	4-5 tbsp

TABLES



TABLE : COOKING, GRILLING AND BROWNING

Food	Quantity -g-	Setting	Power -Level-	Time -min-	Method	Standing time -min-	
Roasts (Pork, Veal, Lamb)	500	☛	100 P	6-8	Season to taste, place in shallow dish, place on revolving plate, turn over after *	5-10	
		☛☛	50 P	3-5*			
	1000	☛	70 P	4-7			
		☛☛	50 P	2-4			
		☛	100 P	13-16			
		☛☛	50 P	6-8*			
		☛	70 P	10-12			
		☛☛	50 P	3-5			
		1500	☛	100 P			24-26
			☛☛	50 P			9-11*
☛	70 P		14-16				
Roast beef (medium)	1000	☛☛	70 P	7-10	Season to taste, place fatty side down in shallow dish, place on revolving plate, turn over after *	10	
		☛☛☛	50 P	7-8*			
		☛☛	70 P	4-5			
	1500	☛☛☛	50 P	5-7			
		☛☛	70 P	8-10			
		☛☛☛	50 P	8-10*			
Chicken	1200	☛☛	100 P	8-11	Season to taste, place breast side down in shallow dish, place on revolving plate, turn over after *	3	
		☛☛☛	50 P	5-7*			
		☛☛	100 P	8-11			
		☛☛☛	50 P	4-5			
Chicken legs	200	☛☛	50 P	5-6	Season to taste, place skin downwards on grill, turn over after *	3	
		☛☛☛		1-2*			
		☛☛☛		6-8			
Steaks 2 medium pieces	400	☛☛☛		13-15*	Place on rack, turn over after *, season after grilling	2	
		☛☛☛		8-12			
To brown dishes etc.		☛☛☛		5-7	Place dish on the rack	10	
Croque monsieur, 1 slice		☛☛☛		6-9	Toast bread, spread with butter, lay 1 slice of cooked ham, 1 slice of pineapple and 1 slice of processed cheese on top and grill		



RECIPES

ADAPTING RECIPES FOR THE MICROWAVE OVEN

If you would like to adapt your favourite recipes for the microwave, you should take note of the following: Shorten cooking times by a third to a half. Follow the example of the recipes in this cookery book. Foods which have a high moisture content such as meat, fish, poultry, vegetables, fruit, stews and soups can be prepared in your microwave without any difficulty.

Foods which have little moisture, such as platters of food, should have the surface moistened prior to heating or cooking.

The amount of liquid to be added to raw foods, which are to be braised, should be reduced to about two thirds of the quantity in the original recipe. If necessary, add more liquid during cooking.

The amount of fat to be added can be reduced considerably. A small amount of butter, margarine or

oil is sufficient to flavour food. For this reason your microwave is excellent for preparing low-fat foods as part of a diet.

HOW TO USE THE RECIPES

- All the recipes in this cookery book are calculated on the basis of 4 servings - unless otherwise stated.
- Recommendations relating to suitable utensils and the total cooking times are given at the beginning of every recipe.
- As a rule the quantities shown are assumed to be wholly consumable, unless specifically indicated otherwise.
- When eggs are given in the recipes they are assumed to have weight of approx. 55 g (medium).



SOUPS AND STARTERS

Spain

CREAM OF AVOCADO SOUP

Sopa de aguacates

Total cooking time: approx. 10-12 minutes


Utensils: Bowl with lid (2 litre capacity)

Ingredients

- 3 avocados (600 g of flesh)
- a little lemon juice
- 700 ml meat stock
- 70 ml cream
- salt
- pepper

Procedure

1. Peel the soft, ripe avocados, remove stone, cut into small pieces and puree with a mixer or a mixing attachment on a hand mixer. Reserve two thin slivers per portion for decoration and sprinkle with lemon juice.
2. Put the meat stock, avocados and the cream in a dish, season with salt and pepper and cook with lid on. Stir once during cooking.
10-12 min. # 100 P
3. Mix soup until creamy and decorate with the remaining avocado slivers. Allow to stand for 5 minutes after cooking.

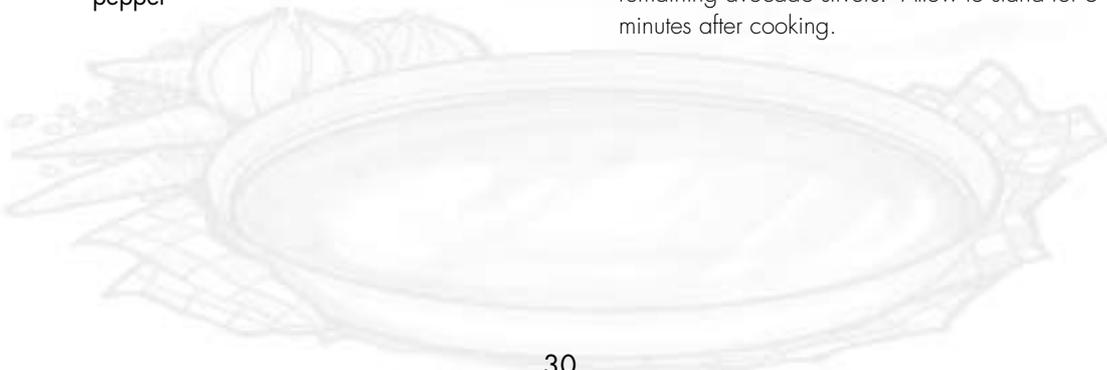

SOUPS AND STARTERS



Switzerland

BARLEY SOUP

Bündner Gerstensuppe

Total cooking time: approx. 35-40 minutes

Utensils: Bowl with lid (2 litre capacity)

Ingredients

- 2 tbsp butter or margarine (20 g)
- 1 onion (50 g), finely chopped
- 1-2 carrots (130 g), sliced
- 15 g celery, diced
- 1 leek (130 g), in rings
- 3 white cabbage leaves (100 g) in strips
- 200 g veal bones
- 50 g streaky bacon, in strips
- 50 g barley grains
- 700 ml meat stock
- pepper
- 4 Wiener sausages (300 g)

Netherlands

MUSHROOM SOUP

Champignonsoep

Total cooking time: approx. 13-17 minutes

Utensils: Bowl with lid (2 litre capacity)

Ingredients

- 200 g mushrooms, sliced
- 1 onion (50 g), finely chopped
- 300 ml meat stock
- 300 ml cream
- 2½ tbsp plain flour (25 g)
- 2½ tbsp butter or margarine (25 g)
- salt and pepper
- 1 egg yolk
- 150 g crème fraîche

Soup insert

SOUP THICKENER with EGG

for half a litre of soup

Total cooking time: approx. 3-5 minutes

Utensils: Coffee cup (150 ml capacity)

Ingredients

- 1 egg
- 4 tbsp Milk or cream (50 ml)
- 1 pinch salt
- 1 pinch nutmeg

Procedure

1. Put the butter and diced onion in the dish and steam with the lid on the dish.
approx. **1-2 min.** ☼ 100 P
2. Add the vegetables to the dish. Then add the bones, the strips of bacon and the barley and fill with the meat stock. Season with pepper and cook with the lid on.
1. **17-19 min.** ☼ 100 P
2. **17-19 min.** ☼ 50 P
3. Chop the sausages into small pieces and heat them for 5 minutes in the dish.
4. After cooking, let the soup stand for 5 minutes. Take the bones out of the soup before serving.

Procedure

1. Put the vegetables with the meat stock in the dish and cook with the lid on.
8-9 min. ☼ 100 P
2. Puree all the ingredients in a food processor. Add the cream.
3. Rub the flour and butter into a dough and stir into the mushroom soup until smooth. Season with salt and pepper, cover and cook. Stir again after cooking.
4-6 min. ☼ 100 P
4. Mix the egg yolk with the crème fraîche, stir into the soup little by little. Heat the whole mixture again for a short time, but do not allow it to boil!
1-2 min. ☼ 100 P
Allow the soup to stand for approximately 5 minutes once cooked.

Procedure

1. Whisk all the ingredients, pour them into the cup and heat until they curdle.
3-5 min. ☼ 30 P
2. Turn out the egg thickening out and allow to cool. Cut into small cubes and add to the soup



SOUPS AND STARTERS

Germany

CAMEMBERT TOAST

Camemberttoast

Total cooking time: approx. 1½-2½ minutes

Utensils: Flat dish

Ingredients

- 4 slices of bread for toasting (80 g)
- 2 tbsp butter or margarine (20 g)
- 150 g Camembert
- 4 tsp Cranberry jelly (40 g)
- Cayenne pepper

Procedure

1. Toast the bread and spread with butter.
2. Cut the Camembert into slices and arrange on top of the toast. Put the Cranberry jelly in the middle of the cheese and sprinkle with Cayenne pepper.
3. Place the toast on a plate and heat.
approx **1½ -2½ min.** ☼ 100 P

Tip: You can vary this recipe according to your taste. For example, you can use fresh mushrooms and grated cheese or cooked ham, asparagus and Emmental cheese.



MEAT, FISH AND POULTRY

France

FRESH TUNA WITH VEGETABLES

Thon frais braisé aux tomates et aux poivrons

Total cooking time: approx. 21-23 minutes

Utensils: Shallow oval gratin dish with lid
(approx. 26 cm diameter)

Ingredients

- 500 g fresh tuna, in slices
- 2 tbsp lemon juice
- salt
- 1 tsp vegetable oil to grease the dish
- ½ green pepper (125 g), cut into strips
- 2 onions (125 g), finely chopped
- 1 carrot (50 g), sliced
- 1-2 tomatoes (125 g), diced
- 40 ml white wine
- 1 clove of garlic
- Bouquet garni
- Salt and pepper

Procedure

1. Wash the tuna, pat dry and sprinkle with lemon juice. Allow the fish to stand for approximately 15 minutes, then pat dry again and add salt.
2. Spread oil on the bottom of the dish and lay the tuna in it. Arrange the vegetables on top of the fish. Add the white wine, the clove of garlic and the bouquet garni and season. Cover the dish and cook.
21-23 min. ☼ 70 P
Allow the fish to stand for approximately 2 minutes after cooking. Remove the bouquet garni and the clove of garlic before serving.

Tip: A bouquet garni is made of:
a sprig of parsley, a bunch of herbs and vegetables for making soup, lovage, thyme and a few bay leaves

MEAT, FISH AND POULTRY



Spain

MUSHROOM WITH ROSEMARY

Champinones rellenos al romero

Total cooking time: approx. 15-21 minutes

Utensils: Bowl with lid (1 litre capacity)

Shallow round dish
(approx. 22 cm diameter)

Ingredients

- 8 large mushrooms (approx. 225 g), whole
- 2 tbsp butter or margarine (20 g)
- 1 onion (50 g), finely chopped
- 50 g bacon, finely diced
- black pepper, ground
- fresh rosemary, bruised
- 125 ml dry white wine
- 125 ml cream
- 2 tbsp flour (20 g)

Procedure

1. Remove the stalks from the mushrooms and chop the stalks into small pieces.
2. Spread the butter on the bottom of the dish. Add the onions, the diced bacon and the mushroom stalks. Season with pepper and rosemary, cover and cook.
4-6 min. ⚡ 100 P
Leave to cool.
3. Heat 100 ml of the wine and cream in the other dish with its lid on.
2-3 min. ⚡ 100 P
4. Mix the remaining wine with the flour, stir into the hot liquid and cook with the lid on. Stir once during cooking.
1-2 min. ⚡ 100 P
5. Fill the mushrooms with the bacon mixture, place in the sauce and cook on the rack.
2-3 min. ⚡ 100 P
6-7 min. ⚡  50 P
Allow the mushrooms to stand for approximately 2 minutes once cooked.

Germany

COURGETTE AND MACARONI BAKE

Zucchini-Nudel-Auflauf

Total cooking time: approx. 41-49 minutes

Utensils: Bowl with lid (2 litre capacity)

Gratin dish (approx. 26cm diameter)

Ingredients

- 500 ml water
- 1/2 tsp oil
- 80 g macaroni
- 400 g tinned tomatoes, chopped
- 3 onions (150 g), finely chopped
- Basil, thyme, salt, pepper
- 1 tbsp oil to grease the dish
- 450 g courgettes, sliced
- 150 g sour cream
- 2 eggs
- 100 g grated cheddar cheese

Procedure

1. Put the water, oil and salt in the dish and bring to the boil with the lid on.
3-4 min. ⚡ 100 P
2. Break the macaroni into pieces, add to the dish, stir and allow to swell.
8-10 min. ⚡ 30 P
Drain the macaroni and allow to cool.
3. Mix the tomatoes with the onions and season well. Grease the gratin dish. Put the macaroni in it and pour the tomato sauce over it. Arrange the courgette slices on the top.
4. Beat the sour cream with the eggs and pour over the mixture in the dish. Sprinkle the grated cheese over the top.
AUTOCOOK AC-8 or
25-28 min. ⚡ 100 P
5-7 min. ⚡  50 P
Allow the dish to stand for 5-10 minutes after cooking.

ENGLISH



MEAT, FISH AND POULTRY

Austria

STUFFED ROAST CHICKEN

Gefülltes Brathähnchen

Stuffed roast chicken for two servings

Total cooking time: approx. 32-39 minutes

Utensils: Quiche dish

Thread

Ingredients

- 1 chicken (1000 g)
- Salt, bruised (fresh) rosemary, bruised marjoram
- 1 stale bread roll (40 g)
- salt
- 1 bunch parsley, finely chopped (10 g)
- 1 pinch nutmeg
- 2 tbsp butter or margarine (20 g)
- 1 egg yolk
- 3 tbsp butter or margarine (30 g)
- 1 tsp paprika, mild
- salt
- 1 tsp butter or margarine to grease the dish

Procedure

1. Wash the chicken, pat it dry and season the cavity with salt, rosemary and marjoram.
2. To make the filling, soak the bread roll for approximately 10 minutes in cold water, and then squeeze out excess water. Mix butter and egg yolk with salt, parsley, nutmeg, and stuff the chicken with the mixture. Sew the opening with cotton or butcher's thread.
3. Heat the butter.
approx. 1 min. # 100 P
Mix the paprika and salt with the butter and smear it on the chicken.
4. Cook the chicken in the greased quiche dish (do not cover).
 1. **11-13 min.** # 100 P
 2. **5-7 min.** # 50 P
 Turn the chicken over
 3. **11-13 min.** # 100 P
 4. **4-5 min.** # 50 P
 Allow the stuffed chicken to stand for approximately 3 minutes after cooking.

Switzerland

FISH FILLET WITH CHEESE SAUCE

Fischfilet mit Käsesauce

Total cooking time: approx. 22-26 minutes

Utensils: Bowl with lid (1 litre capacity)

Shallow round gratin dish
(approx. 25 cm diameter)

Ingredients

- 3 fish fillets (approx. 600 g)
- 2 tbsp lemon juice
- salt
- 1 tbsp butter or margarine
- 1 onion (50 g), finely chopped
- 2 tbsp flour (20 g)
- 100 ml white wine
- 1 tsp vegetable oil to grease the dish
- 100 g grated Emmental cheese
- 2 tsp chopped parsley

Procedure

1. Wash the fish, pat dry and sprinkle with lemon juice. Leave to stand for 15 minutes, pat dry again and rub with salt.
2. Smear the butter on the bottom of the dish. Add the diced onion, cover with the lid and steam.
approx. 2 min. # 100 P
3. Sprinkle the flour over the onions and stir. Add the white wine and mix.
4. Grease the gratin dish and place the fish in it. Pour the sauce over the fish and sprinkle with cheese. Place on the grill and cook.
16-19 min. # 70 P
4-5 min. # 50 P
Allow fish to stand for approximately 2 minutes after cooking. Serve with a garnish of chopped parsley

MEAT, FISH AND POULTRY



Germany

COLOURED MEAT KEBABS

Bunte Fleischspiesse

Total cooking time: approx. 14-17 minutes

Utensils: Rack

3 wooden skewers
(approx. 20-25 cm long)

Ingredients

250-300 g pork cutlets
60 g bacon
1-2 onions (75 g), cut in quarters
3 tomatoes (150 g), cut in quarters
1/2 green pepper (75 g), cut into 8
3 tbsp oil
2 tsp paprika
salt
1 tsp cayenne pepper
1 tsp Worcester sauce

Procedure

1. Cut the pork and the bacon into cubes approximately 2-3cm in size.
2. Skewer the meat the vegetables alternately on the wooden skewer.
3. Mix the oil with the spices and place the skewers on the grill and cook on the rack.

AUTOCOOK AC-2 or

1. **7-9 min.** 50 P
4. Turn the skewers over.
2. **7-9 min.** 50 P

Spain

STUFFED HAM

Jamón relleno

Total cooking time: approx. 15-21 minutes

Utensils: Bowl with lid (2 litre capacity)

Shallow oval gratin dish with lid
or microwave foil
(approx. 26 cm long)

Ingredients

125 g fresh spinach, with stalks removed
125 g quark (6% fat)
40 g grated Emmental cheese
Pepper
Paprika, mild
6 slices cooked ham (300 g)
125 ml water
125 ml cream
2 tbsp flour (20 g)
2 tbsp butter or margarine (20 g)
1 tsp butter or margarine to grease the dish

Procedure

1. Cut the spinach finely, mix with the quark and the cheese and season to taste.
2. Place a tablespoon of the filling on each slice of the cooked ham and roll up. Secure the ham with a wooden toothpick.
3. Make a béchamel sauce. To do this, pour the liquid into the dish, cover and heat.

3-4 min. 100 P

Rub the butter into the flour, add to the liquid and beat with a balloon whisk, until it is smooth. Cover, bring to the boil until thickened.

approx. 1 min. 100 P

Stir and taste.

4. Pour the sauce into the greased dish, place the ham rolls in the dish and cook with the lid on. To brown the top, remove the lid and place the dish on the rack.

1. **6-9 min.** 100 P

2. **5-7 min.** 50 P

Allow the ham rolls to stand for approximately 5 minutes after cooking.

Tip: You can also use ready-made béchamel sauce for this recipe.



MEAT, FISH AND POULTRY

Greece

POT ROAST WITH GREEN BEANS

Kréas mé fasólia

Total cooking time: approx. 20-24 minutes

Utensils: Bowl with lid (2 litre capacity)

Ingredients

- 1-2 tomatoes (100 g)
- 400 g lamb without bones
- 1 tsp butter or margarine to grease the dish
- 1 onion (50 g), finely chopped
- 1 clove of garlic, crushed
- salt and pepper
- sugar
- 250 g tinned green beans

Procedure

1. Peel the tomatoes, cut out the stalks and purée in a food processor.
2. Cut the lamb into large cubes. Grease the dish with butter. Add the meat, the diced onion and crushed garlic clove, season, cover dish and cook.
9-11 min. # 100 P
3. Add the beans and the puréed tomatoes to the meat and continue to cook with the lid on.
11-13 min. # 70 P
Allow the meat to stand for approximately 5 minutes after cooking.

Tip: If you use fresh beans, these must be cooked in advance.

Switzerland

ZURICH VEAL STEW

Züricher Geschnetzeltes

Total cooking time: approx. 11-15 minutes

Utensils: Bowl with lid (2 litre capacity)

Ingredients

- 600 g veal fillet
- 1 tbsp butter or margarine
- 1 onion (50 g), finely chopped
- 100 ml white wine
- Gravy thickener to make approx. 1/2 litre
- 300 ml cream
- salt and pepper
- 1 tbsp parsley, chopped

Procedure

1. Slice the meat into finger-thick strips.
2. Smear the butter evenly around the dish. Add the onion and the meat to the dish, cover and cook. Stir once during cooking.
7-10 min. # 100 P
3. Add the white wine, the gravy powder and the cream, stir, cover and continue to cook. Stir once during cooking.
4-5 min. # 100 P
4. Taste the stew, stir again and allow to stand for 5 minutes. Serve with parsley garnish.

France

FILET OF SOLE

Filets de sole for 2 Portions

Total cooking time: approx. 13-16 minutes

Utensils: Shallow oval gratin dish with lid (approx. 26 cm)

Ingredients

- 400 g filet of sole
- 1 lemon, untreated
- 2 tomatoes (150 g)
- 1 tsp butter or margarine to grease the dish
- 1 tbsp vegetable oil
- 1 tbsp parsley, chopped
- salt and pepper
- 4 tbsp white wine (30 ml)
- 2 tbsp butter or margarine (20 g)

Procedure

1. Wash the fish and pat dry. Remove any bones.
2. Slice the lemon and the tomatoes finely.
3. Grease the gratin dish with butter. Place the fish in it and drizzle with vegetable oil.
4. Sprinkle the fish with parsley, lay the slices of tomato on top and season. Lay the slices of lemon on top of the tomato and pour the white wine over this.
5. Dot the lemon with butter, cover and cook.
13-16 min. # 70 P
Die Fischfilets nach dem Garen 2 min. stehen lassen.

Tip: You can also use rosefish, halibut, mullet, plaice or cod in this recipe.

MEAT, FISH AND POULTRY



China

PRAWNS WITH CHILLI

Total cooking time: approx. 5 - 7 minutes

Utensils: Bowl with lid (1 litre capacity)

Bowl with lid (2 litre capacity)

Ingredients

- 6 prawns (shelled 240 g)
- 50 ml white wine
- 2 small bunches of chives (200 g)
- 1-2 chillies, hot
- 20 g ginger (fresh)
- 1 tbsp cornflour
- 2 tbsp vegetable oil (20 g)
- 1 1/2 tbsp soy sauce (20 ml)
- 1 tbsp sugar
- 1 tbsp vinegar

Procedure

1. Wash the prawns. Remove the shell and tail. Cut into the spine and remove gut. Cut each prawn into 2 or 3 pieces and snip each piece so they do not curl when cooked. Put the prawns into a bowl and sprinkle with the wine. Cover and marinate.
2. Wash chives and chillis and pat dry. Cut chives into 5cm lengths. Cut chillies in half lengthwise and remove seeds. Peel and slice ginger.
3. Take the prawns out of the wine and coat them in cornflour.
4. Put oil, chives, chillies and ginger slices into bowl and cover. Heat.
approx. **2 min.** # 100 P
5. Add prawns to the bowl. Season with soy sauce, sugar and vinegar. Stir and cook covered.
3-5 min. # 100 P
Allow the prawns to stand for 1 - 2 minutes after cooking. Serve hot.

Germany

ROAST PORK WITH CRACKLING

Schweinebraten mit Kruste

Total cooking time: approx. 55-63 minutes

Utensils: Bowl with lid (2 litre capacity)

Bowl with lid (1 litre capacity)

Ingredients

- 1000 g boned shoulder of pork, with fat rind
- 1 - 2 garlic cloves
- salt
- black pepper, freshly ground
- 1 tsp caraway seeds
- 2 carrots, sliced (125 g)
- 60 g celeriac, finely diced
- 60 g leeks, sliced in rings
- salt and pepper
- 75 ml water
- 75 ml beer
- Gravy thickener, dark, for 1/4-1/2 litre gravy

Procedure

1. Wash the meat and pat dry. Cut a criss-cross pattern onto the fat rind.
 2. Crush garlic clove, mix with salt, pepper and caraway seeds, and use to season meat.
 3. Place the meat rind-down in bowl. Season vegetables and add them to bowl. Mix water and beer and pour into bowl. Cook covered, turning halfway through cooking.
 1. **6-7 min.** # 100 P
 2. **46-52 min.** # 70 P
 4. Remove meat, wrap in kitchen foil and leave to stand for 10 minutes. Strain the meat juices through a sieve into the small dish. Add water to make 250 ml of liquid. Add the correct amount of gravy thickener to the juices, stir and heat covered, stirring occasionally.
3-4 min. # 100 P
Season the sauce as required, pour over meat and serve.
- Tip: vegetables and dumplings or boiled potatoes go well with this recipe



VEGETABLES AND NOODLES

Italy

LASAGNE

Lasagne al forno

Total cooking time: approx. 22-26 minutes

Utensils: Bowl with lid (2 litre capacity)
Shallow rectangular gratin dish with lid
(approx. 20x20x6 cm)

Ingredients

300 g tomatoes, tinned
50 g ham, finely diced
1 onion (50 g), finely chopped
1 garlic clove, crushed
250 g minced beef
2 tbsp tomato puree (30 g)
salt and pepper
oregano, thyme, basil
150 ml creme fraiche
100 ml milk
50 g grated Parmesan cheese
1 tsp chopped mixed herbs
1 tsp olive oil
salt, pepper and nutmeg
1 tsp vegetable oil for greasing dish
125 g green lasagne sheets
1 tsp grated Parmesan cheese
1 tsp butter or margarine

Procedure

1. Slice the tomatoes and mix with the diced onion and ham, garlic, minced beef and tomato puree. Season and steam with lid on.
7-9 min. # 100 P
2. Mix together the cream, milk, Parmesan cheese, herbs and oil. Season.
3. Grease the dish and cover the base with $\frac{1}{3}$ of the pasta sheets. Spread half of the meat mixture on top of the pasta and cover with some of the cheese sauce. Lay another $\frac{1}{3}$ of the pasta on top of this, followed by the meat mixture and some sauce. Finish with the last $\frac{1}{3}$ of the pasta covered with a lot of sauce and top with grated Parmesan. Add butter slivers and cook with lid on.
15-17 min. # 70 P
Leave the lasagne 5 to 10 minutes to stand after cooking.

France

VEGETABLE CASSEROLE

Ratatouille spécial

Total cooking time: approx. 19-21 minutes

Utensils: Bowl with lid (2 litre capacity)

Ingredients

5 tbsp olive oil (50 ml)
1 garlic clove, crushed
1 onion (50 g), sliced
1 small aubergine (250 g), roughly chopped
1 courgette (200 g), roughly chopped
1 pepper (200 g), roughly chopped
1 small fennel bulb (75 g), roughly chopped
pepper
1 bouquet garni
200 g tin artichoke hearts, quartered
salt and pepper

Procedure

1. Put olive oil and garlic in dish. Add all the prepared vegetables except the artichoke hearts and season with pepper. Add the bouquet garni and cook covered. Stir once during cooking.
19-21 min. # 100 P
Add the artichoke hearts to the bowl for the last 5 minutes.
 2. Season the ratatouille to taste and take the bouquet garni out before serving. Once cooked, leave the ratatouille to stand for about 2 minutes.
- Tip: Serve this hot vegetable casserole with meat dishes. Served cold it makes a delicious starter.

Bouquet garni consists of: a sprig each of parsley, lovage and thyme, plus some bay leaves.

VEGETABLES AND NOODLES



Spain

STUFFED POTATOES

Patatas Rellenas

Total cooking time: approx. 12 - 16 minutes

Utensils: Bowl with lid (2 litre capacity)

China plates

Ingredients

4	medium-sized potatoes (400 g)
100 ml	water
60g	ham, finely diced
1/2	onion (25 g), finely chopped
75-100 ml	milk
2 tbsp	grated Parmesan cheese (20 g)
	salt
	pepper
2 tbsp	grated Emmental cheese

Procedure

- Put the potatoes in the bowl, add the water, cover and cook. Turn once during cooking.
8-10 min. # 100 P
Allow to cool.
- Halve the potatoes lengthways and carefully scoop out the flesh. Mix the potato with the ham, onion, milk and Parmesan until it is smooth. Season with salt and pepper.
- Fill the potato skins with the mixture, top with the grated Emmental, place on the plates and cook.
4-6 min. # 100 P
Leave the potatoes to stand for about 2 minutes after cooking.

DRINKS AND DESSERTS



Denmark

BERRY JELLY WITH VANILLA SAUCE

Rødgrød med vanilie sovs

Total cooking time: approx. 10-13 minutes

Utensils: 2 dishes with lids (2 litre capacity)

Ingredients

150 g	redcurrants, washed, stems and stalks removed
150 g	strawberries, washed, stalks removed
150 g	raspberries, washed and checked
250 ml	white wine
100 g	sugar
50 ml	lemon juice
8	gelatine sheets
300 ml	milk
	Flavouring from 1/2 vanilla pod
30 g	sugar
15 g	cornflour

Procedure

- Reserve some of the fruit for decoration. Puree the rest of the berries with the wine. Put into the bowl and cook cover.
7-9 min. # 100 P
Add sugar and lemon juice.
- Leave gelatine in cold water for 10 minutes to soften. Remove and squeeze out water. Stir gelatine into the hot fruit until it dissolves. Put the jelly into the fridge to set.
- To make the vanilla sauce, put the milk in a bowl. Slice the vanilla pod open and scrape out the vanilla flavouring. Stir the flavouring, sugar and cornflour into the milk and cover before cooking. Stir occasionally during cooking and to finish.
3-4 min. # 100 P
- Tip the set jelly onto a plate and garnish with the whole berries. Serve with the vanilla sauce.

Tip: You can also use frozen fruit once it is defrosted.



DRINKS AND DESSERTS

France

PEARS IN CHOCOLATE SAUCE

Poires au chocolat

Total cooking time: approx. 12-16 minutes

Utensils: Bowl with lid (2 litre capacity)

Bowl with lid (1 litre capacity)

Ingredients

4 pears (600 g)
 60 g sugar
 1 packet of vanilla sugar (10 g)
 1 tbsp pear liqueur, 30% proof
 150 ml water
 130 g plain chocolate, broken into pieces
 100 g crème fraiche

Procedure

1. Peel the pears, keeping them whole.
2. Put sugar, vanilla sugar, liqueur and water into the bowl. Stir and heat.
1-2 min. ☼ 100 P
3. Place the pears in the juice, cover and cook.
9-11 min. ☼ 100 P
Take the pears out of the juice and allow to cool.
4. Put 50 ml of the juice in the small bowl, add the cream and chocolate. Cover and heat.
2-3 min. ☼ 100 P
5. Stir the sauce well and pour over the pears to serve.

Tip: You could also serve this with vanilla ice cream.

Niederlande

FIERY DRINK

Vuurdrank for 10 Portions

Total cooking time: approx. 9-11 minutes

Utensils: Bowl with lid (2 litre capacity)

Ingredients

500 ml white wine
 500 ml red wine, dry
 500 ml rum, 54% proof
 1 whole orange, untreated
 3 cinnamon sticks
 75 g sugar
 10 tsp rock candy

Procedure

1. Pour the alcohol into the bowl. Peel the orange so that the peel is thin and put this in the alcohol together with the cinnamon and sugar. Cover and heat.
9-11 min. ☼ 100 P
Remove the peel and cinnamon. Put one teaspoon of the rock candy into each grog glass, top up with the fiery drink and serve.

Österreich

CHOCOLATE WITH CREAM

Schokolade mit Schlagobers for 1 Portion

Total cooking time: approx. 1-2 minutes

Utensils: large cup (200 ml capacity)

Ingredients

150 ml milk
 30 g plain chocolate, grated
 30 ml cream
 chocolate vermicelli

Procedure

1. Pour the milk into the cup. Add the chocolate, stir and heat. Stir occasionally.
approx. **1-2 min.** ☼ 100 P
2. Whip the cream until stiff and spoon this on top of the chocolate. Serve garnished with chocolate vermicelli.

Deutschland

HOT LEMON

Heisse Zitrone for 1 Portion

Total cooking time: approx. 1-2 minutes

Utensils: Tea glass (150 ml capacity)

Ingredients

100 ml Water
 juice of 1 lemon
 2-3 tsp sugar

Procedure

1. Pour water and lemon juice into the glass and heat.
approx. 1-2 min. ☼ 100 P
Stir in sugar to taste.

• SEULEMENT VALIDE POUR L'ALLEMAGNE • SLECHTS GELDIG VOOR DUITSLAND •
• SOLTANTO VALIDO PER LA GERMANIA • SOLAMENTE VÁLIDO PARA ALEMANIA •

Haushaltsgeräte

Gilt nur für Deutschland

Lieber SHARP Kunde,

SHARP- Geräte sind Markenartikel, die mit Präzision und Sorgfalt nach modernen Fertigungsmethoden hergestellt werden. Bei sachgemäßer Handhabung und unter Beachtung der Bedienungsanleitung wird Ihnen Ihr Gerät lange Zeit gute Dienste leisten.

Das Auftreten von Fehlern ist aber nie auszuschließen. Sollte Ihr Gerät innerhalb der gesetzlichen oder mit Ihrem Verkäufer vereinbarten Verjährungsfristen für Sachmängel-/ Garantiefristen einen Mangel aufweisen, so wenden Sie sich bitte an den Handelsbetrieb, bei dem Sie das Gerät erworben haben, denn dieser ist Ihr Ansprechpartner für Sachmängel / Garantieansprüche.

.....

Wichtiger Hinweis für alle ein-/ untergebauten Haushalts-Mikrowellengeräte

Wurde Ihr Gerät von einem Handelsbetrieb fachgerecht mit einem von SHARP genehmigten Einbaurahmen ein-/ bzw. untergebaut, so können Sie sich direkt an unseren:



zwecks Reparaturabwicklung im Vor-Ort-Service wenden:

Achtung:

Wird dieser Service für von Ihnen selbst ein-/untergebaute Geräte in Anspruch genommen, sind für Aus- /und Einbau, Fahrzeit und Km die entstehenden Kosten von Ihnen zu tragen!

Bitte erkundigen Sie sich vor Anforderung des Kundendienstes bei diesem über die anfallenden Kosten. Den für Sie nächstgelegenen Kundendienst nennt Ihnen gern unsere og. Hotline.

Als Nachweis für Sachmängel-/ Garantiarbeiten dient Ihr Kaufbeleg / Rechnung

Selbstverständlich können Sie unseren QUICK 48 Vor-Ort-Service Mikrowellengeräte auch nach Ablauf der Verjährungsfristen für Sachmängel-/Garantiefristen in Anspruch nehmen, dann jedoch gegen Aufwandsberechnung des jeweiligen Kundendienstes.

SHARP ELECTRONICS (EUROPE GmbH)
Parts & Technical Services

<http://www.sharp.de>

• ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

ÖSTERREICH - <http://www.sharp.at>

Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen.

Fa. Manfred Mayer GmbH, 1234 Wien, Stipcakgasse 6, 01 - 609 31 20
Fa. MCL-Service GesmbH, 1232 Wien, Deutschstr. 19, 01 - 616 88 00
Fa. Schuhmann Ges.m.b.H., 4030 Linz, Gablonzerweg 18, 0732 - 38 22 80
Fa. Roland Göschl, 5020 Salzburg, Bayerhammerstr. 12c, 0662 - 88 23 07
Fa. Reitmeir, 6020 Innsbruck, Leopoldstr. 57, 0512 - 93 82 53
Radio-TV A. Moser, 6900 Bregenz, An der Heufurt 28, 05574 - 757 77
Fa. AV-Pichler, 8055 Graz, Am Wagrain 342, 0316 - 29 12 92
Fa. Audio Video Service, 9020 Klagenfurt, Feldkirchnerstr. 72, 0463 - 431 14
Fa. Scheuermann, 9500 Villach, Rennsteinerstr. 8, 04242 - 211 74

BELGIUM - <http://www.sharp.be>

En cas d'une réclamation concernant une four a micro-onde SHARP, nous vous prions de vous adresser à votre spécialiste ou à une adresse des SHARP Services suivantes.

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of een van de onderstaande Sharp service centra.

SHARP ELECTRONICS, Phone: 0900-10158
AVTC, Kleine Winkellaan 54, 1853 Strombeek-Bever, 02/2674019
ETS HENROTTE, Rue Du Campinaire 154, 6240 Farciennes, 071/396290
Nouvelle Central Radio (N.C.R.), Rue des Joncs 15 L-1818 HOWALD, 00352404078
Service Center Deinze, Kapellestraat, 95, 9800 DEINZE, 09-386.76.67

NEDERLAND - <http://www.sharp.nl>

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of naar onderstaand Sharp Service Centrum.

SHARP ELECTRONICS BENELUX BV, Helpdesk -, Postbus 900, 3990 DW Houten, 0900-7427723

FRANCE - <http://www.sharp.fr>

En cas de réclamation pour les fours micro-ondes SHARP, nous vous prions de vous adresser à votre spécialiste ou à l'une des stations techniques agréées SHARP suivantes:

A.A.V.I., 1 rue du Mont de Terre, 59818 Lesquin Cedex, 03.20.62.18.98
A.A.V.I. (Point d'Accueil), 9-11 rue Léon Trulin, 59000 Lille, 03.20.14.96.20
ATELIER ROUSSEL, 12 Bld Flandre Dunkerque, 56100 Lorient, 02.97.83.07.41
BASTIA TELE VIDEO, Immeuble Le Béarn - Av. de la libération, 20600 Bastia, 04.95.30.81.29
C.M.T.S., 38 rue des Ormeaux, 75020 Paris, 01.43.70.20.00
ELECTRONIC SERVICE PLUS, 5 bd LOUIS XI - ZI le Menneton, 37000 Tours, 02.47.77.90.90
ELECTRO SERVICE, 21 rue de Mulhouse - B.P 122, 68313 Illzach, 03.89.62.50.00
M.R.T., 74 Rue Albert Einstein - 72021 Le Mans Cedex, 02.43.28.52.20
S.T.E., 3 chemin de l'Industrie, 06110 Le Cannet Rocheville, 04.93.46.05.00
S.T.R. AQUITAINE, 111 rue Bouthier - B.P 27, 33015 Bordeaux, 05.57.80.78.07
S.T.V.S., 1 rue de la Presse, 42000 Saint Etienne, 0825.898.903
S.T.V.S., 10 chemin Saint Gobin, 69 190 Saint fons, 04.72.89.06.89
S.T.V.S. (point d'accueil), 143 av Maréchal de Saxe, Entrée: 54 rue Villeroy, 69003 Lyon 04.78.62.07.05
TECH SERVICE, 15 rue du château de ribaute, ZA ribaute 2, 31130 Quint Fonsegrives, 05.62.57.63.90
TIMO VIDEO, 131 chemin des bassins, Zone Europarc - Hameau D, 94000 Creteil, 01.43.39.08.18
U.N.T.D., 1 rue des Lourdines, 76000 Rouen, 02.35.72.28.04

ITALIA - <http://www.sharp.it>

Nel caso si verificassero problemi alla vostra apparecchiatura potrete rivolgervi presso un nostro centro di assistenza autorizzato sharp

ABRUZZO: CTR di de Berardinis Vincenzo, Via Giuseppe Cacchi L'Aquila, 0862-315407 / **CTR di de Berardinis Vincenzo**, Via P. Gobetti Avezzano L'Aquila, 0863-412131 / **Marinangeli Fabrizio**, Via Rocco Carabba L'Aquila, 0862-310279 / **Marinangeli Fabrizio**, Via F.lli Rosselli Avezzano L'Aquila, 0863-25207 / **Elettrovideo snc**, Via Tiburtina Pescara, 085-52020 / **Cat di Bellone**, Via Dell' Aereoporto Teramo, 0861-415745

BASILICATA: SUONO E IMMAGINE di Conti Massimo, Via E. Maiorana Matera, 0835-389310

CALABRIA: Battaglia Saverio, Via C. Colombo Catanzaro Lido, 0961-33824 / **S.A.T.E. di Dodaro**, Via degli Stadi Cosenza, 0984-482337 / **SE.RI.EL.CO.**, Via delle Medaglie d'Oro Cosenza, 0984-33152 / **Eurotrading dei F.lli Aiello G. & D. snc**, Via Torino Crotona, 0962-20889 / **Assistenza Tecnica Cozzupoli & Crupi snc**, Via R. Campi primo tronco 103 Reggio Calabria, 0965-24022 / **Ater snc**, Via Naz. Pentimele 159/a-b Reggio Calabria, 096547051 / **Ciano Giuseppe**, Via Seconda Traversa Toscanini Taurianova, 0966-643483 / **Audio Video snc**, Via A. De Gasperi 4/e Vibo Valentia, 0963-45571 o 45572

CAMPANIA: Elettronica D' Argenio, Via Nazionale Torretta Nercogliano Avellino, 0825-681590 / **D.R.F. di Rubbo**, Via L. Piccinato Benevento, 0824-62416 / **Audio Service**, Via Cattaneo 4/6 Caserta, 0823-329099 / **Congestri' Ignazio**, Via Giordano Bruno Maddaloni Caserta, 0823-437704 / **Elettronica Service snc di Starace Aniello e C.**, Viale Europa Castellamare di Stabia Napoli,

• ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

081-8728280 / **Errediesse Service**, Via P. Mascagni Napoli, 081-5794825 / **SATEP**, Via Nazionale delle Puglie 176 Casoria Napoli, 081-7590706 / **Video Elettronica 2 di Nasti**, Via Antonino Pio Napoli, 081-7676300 / **M.C. Elettronica snc di Milito M. e Della Sala**, Via dei Mille Salerno, 089-330591 / **Netti Gianfranco**, Via Magna Grecia Capaccio Salerno, 0828-730071

EMILIA ROMAGNA: MA.PI. snc, Via T. Azzolini Bologna, 051-6414115 / **VIDEO 2000 SRL**, Via dell'Industria Bologna, 051-531581/624060 / **Assistenza Electron di Fogli**, Via F.lli Aventi Ferrara, 0532-903250 / **Stema snc**, Viale Bologna Forlì, 0543-704475 / **Audio Video Center**, Via Vandelli 23 Modena, 059-235219 / **REAT srl**, via Giardini Nord 8 Formigine Modena, 059-557168 / **Ecoservice Srl**, Via Buffolara 68A Parma, 0521-987402 / **Parmaservice sas**, Via Benedetta Parma, 0521-271666 / **Riparazioni Elettriche Ravenna**, Via Reale Camerlona Ravenna, 0544-521500 / **Technolab snc**, Via Romea Ravenna, 0544-64008 / **RTE RADIO TV ELETTRONICA di I. Catellani & C.**, Via Premuda Reggio Emilia, 0522-381277 / **Masini Service**, Via Mediterraneo Bellaria Rimini, 0541-347714 / **Novatecnica snc**, Via Giovenale Rimini, 0541-736361 / **Nuova Tecnocoop**, Via Armellini Bellariva di Rimini, 0541-370812

FRIULI VENEZIA GIULIA: D.R.M. di de Monte Ignio, P.ZA Montesanto S. Lorenzo Isontino Gorizia, 0481-808858 / **AVR di Dri sas**, Via Colonna 20/8 Pordenone, 0434-27669 / **Officina Eletrom. di Starace Elio**, Via Caprin Trieste, 040-773718

LAZIO: A.P. Rip. Arduini Piero, Via Licinio Refice 192 Frosinone, 0775-291267 / **Palmieri Francesco**, Via S. Polledrara Frosinone, 0775-291485 / **Elettronica 81**, Via Ezio Latina, 0773-694608 / **Italreg di Albano**, Parco Belvedere Conca 74 Gaeta, 0771-470851 / **CTS centro tecnico specializzato**, Via Rialto Roma, 06-39729748 / **Panaservice SRL**, Via Barbana 35 Roma, 06-5409766 / **Video Service sas di G. Calabrese & C. (VT)**, Str. Teverina Viterbo, 0761-251557

LIGURIA: G.A.T.E. snc, Passo P. Carrega Genova, 010-8361543 / **STAE SNC**, Corso A. Gastaldi Genova, 010-5299269 / **Cat snc di Ginulla O. & Rebuffo M.**, Via L. Giordano Imperia, 0183-710920 / **Michelis Sandro**, Via Giannetti Imperia, 0183-275891 / **RIEN snc**, Via Valle La Spezia, 0187-21925 / **Tognetti service**, Via Lunigiana La Spezia, 0187-507656 / **Teleservice snc**, Via Ponchelli 27R Savona, 019-810058

LOMBARDIA: Video Service snc, Via Locatelli Seriate Bergamo, 035-296883 / **Baccinelli Marzio & C. snc**, Via Branze Brescia, 030-2006411 / **Eurotecnica di Ronchi**, Via Milano Brescia, 030-317673 / **S.T.A.R.T. Video Hi-Fi**, Via Orti Romani Cremona, 0372-38731 / **Sae di Oneda M. snc**, Via Chinaglia Cremona, 0372-460314 / **Tecnovideo snc**, P.zza De Gasperi Mantova, 0376-321554 / **A.E. snc**, via Acerbi 28 Milano, 02-66220906 / **AT Electronics**, Piazza Cartagine 4 Milano, 02-58019146 / **Test TV snc**, Via Altamura Milano, 02-4035408 - 406441 / **Morini Daniele**, Via Maiocchi Voghera Pavia, 0383-368740 / **Crel snc**, Via Carducci Sondrio, 0342-216538 / **Elettronica Cappi**, Via Gorizia Sondrio, 0342-210459 / **Salvadori Claudio**, Via del Bosco Busto Arsizio Varese, 0331-329973 / **Salvadori Claudio Succursale**, Via Merano Varese, 0332-333501 / **Teletecnica 2000**, Via Torino Gallarate Varese, 0331-775519

MARCHE: Digitecnica di Moroni R: & c snc, Via Zuccarini Candia, 071-2866067 / **Marconi Lanfranco**, Via Monte Bianco Porto d'Ascoli, 0735-659230 / **Pluritecnica di Campitelli A. Nespeca M. snc**, Via Gradara Ascoli Piceno, 0736-342635 / **SAT Radio Tv snc**, Via D. Rossi Macerata, 0733-231304 / **C.A.T. snc**, Via A. Cecchi Pesaro, 0721-25608 / **SAT 2000 snc di Sparamonti P. e C.**, Via dello Stadio. 16 Terni, 0744-424133

PIEMONTE: Siragusa & Roagna, C.so Matteotti Asti, 0141-531131 / **Arte e Tecnica snc**, Via Falletti 22 Biella, 015-8496250 / **Alpilab di Giordano**, Corso Giovanni XXIII 11 Cuneo, 0171-690384 / **Videotext di Oberto Stefano**, P.za Trento e Trieste Canale Cuneo, 0173-95878 / **Guida di Guida Alessio**, Via Roggiolo Trecate Novara, 0321-71608 / **El.te di Antonello Adriano**, Via Ugo Foscolo Torino, 011-6503786 / **REAT di Frisina Rita**, Corso Unione Sovietica 584 Torino, 011-3979817 / **Elektro di Fiore Francesco**, Via Tripoli Vercelli, 0161-250071

PUGLIA: Marinelli Benedetto, Via dei Salici Barletta, 0883-514054 / **SAT sas di Partipilo**, Via Borsellino e Falcone 17 bis Bari, 080-5022999 / **Astrotec p.s.c.a.r.l.**, Viale Ofanto Foggia, 0881-685013 / **Stear snc**, Via E. Perrone Foggia, 0881-778483 / **Arnesano Faustino**, Via M. Moscardino 10 Lecce, 0832-318277 / **Microkey srl**, Via Giammatteo Lecce, 0832-399398 / **Microkey srl**, Via de Giuseppe Maglie Lecce, 0836-424813 / **Santoro Attilio**, Via Marche 24 Taranto, 099-335884

SARDEGNA: AS.TEC. Elettronica, Via Riva Villasanta 227 Cagliari, 070-524153 / **Floris Sergio**, Via Mazzini Gonnese, 0781-45436 / **G.S. Elettronica di Porcu Giuseppe M.**, Via della Resistenza Nuoro, 0784-203084 / **Co.ri.fr.el. 2**, Via del Castagno Settore "D" Olbia, 0789-562104 / **Videoelettronica snc**, Via Torino Sassari, 079-276616

SICILIA: Service Russo di Russo Alfonso, Via Dei Giovani Agrigento, 0922-610788 / **Video Service di De Francisci Paolo**, Via P.Nenni Agrigento, 0922-595881 / **Vullo Michele**, Via Gorizia Caltanissetta, 0934-551367 / **A.V.S. Elettronica**, Via Sassari 2/c Catania, 095-446696 / **Cuppari Electronics**, via S. Agostino 15 Messina, 090-672064 / **Cuppari Electronics Succursale**, Via Libertà Capo d'Orlando Messina, 0941-911785 / **Tecnica Sud snc**, Viale Regina Elena Messina, 090-40037 / **Alamia Service Piccola Cooperativa**, C.so Pisani 310/312 Palermo, 091-6570502 / **Di Fonzo F. & Figli snc**, Via Ruggero Loria Palermo, 091-363578 / **Elettronica di Di Tullio Maria**, Via Carlentini Siracusa, 0931-758602 / **Latino Impianti**, Via Eloro Rosolini Siracusa, 0931-857099 / **Tecnico Siracusana**, Via Novelli Siracusa, 0931-39440 / **Arte TV sas**, Via G. Centorbi 17 Mazara del Vallo Trapani, 0923-908160 / **Euroservice 2000**, via degli Atleti 61/c Marsala Trapani, 0923-956475

TOSCANA: Bardazzi Paolo, Via Forlanini 8DR Firenze, 055-4376776 / **Cate di Lepri Guido e C. snc**, Via Segantini Empoli, 0571-80652 / **Centi Franco**, Via Dosio 83 Firenze, 055-710388 / **Laboratorio Tv Arrighi**, Via F.lli Cervi P.A. Elsa Empoli, 0571-931327 / **M2 Elettronica**, Via Danimarca Grosseto, 0564-454571 / **NA.TO.MA. snc**, Via del sabotino 13 Grosseto, 0564-456229 / **Cate di Lepri Guido e C. snc**, C.so Matteotti Cecina, 0586-635071 / **A.T.E.S.**, Via Torino 3/a Livorno, 0586-859566 / **Laboratorio Riparazioni Falchi**, Via A. Garibaldi Piombino, 0565-49400 / **Teleservice di D'Amicis E. & V. snc**, Via P. Pisana Livorno, 0586-400564 / **E.T.S. di Napolitano Biagio**, Via Bientina Altopascio, 0583-269196 / **Elettronica RNP**, Via Romana Lucca, 0583-956225 o 957565 / **MGM Service snc di Martinelli**, Via Paolinelli Capannori, 0583-30382 / **DBS ELETTRONICA di Aldovardi S. & C. snc**, Via Simon musico Massa, 0585-489893 / **SAEC**, Via degli Artigiani Massa, 0585-251724 / **Belcari Enrico**, Via J. Gagarin Pisa, 0587-420273 / **E.T.S. di Napolitano Biagio**, Via Lucchese Montecatini Terme, 0572-767430 / **Cate di Lepri Guido e C. snc**, Via Fiorentina Prato, 0574-632652 / **Teleservice di Benvenuti Stefano**, Via E.Fermi 9/13 Prato, 0574-580840 / **PA.RI.ELS.di Barletti Mirella**, Via B.Tolomei 9 Siena, 0577.51159

TRENTINO ALTO ADIGE: Dal Pozzo Enzo, Via Barletta Bolzano, 0471-913290 / **Tecnoservice snc**, Via San Vigilio Bolzano, 0471-289062 / **Melone Michele**, Via Zara Trento, 0461-235166 / **Sighel Mauro**, Via A. Volta Trento, 0461-935919

• ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

UMBRIA: Baldassarri G. & G. snc, Via A. Manna S. Andrea delle Fratte, 075-5270921 / **Tecnoconsult Elettronica**, Via Madonna Alta Perugia, 075-5003089 / **Quondam**, Via del Rivo Terni, 0744-301512

VALLE D'AOSTA: Cat di D'Isanto, C.so Ivrea Aosta, 0165-364056

VENETO: D.D. Assistenza Tecnica snc, Via Mondin Belluno, 0437-30240 / **Pierezza Carlo**, Via Barroccio dal Borgo Padova, 049-681592 / **L'Elettronica più snc**, Via Gaspare Campo Rovigo, 0425-33221 / **Assistenza Elettronica Campi**, Via E. Reginato Treviso, 0422-436245 / **Franchino gianfranco**, Via Zermanese 6B Treviso, 0422-321054 / **Video Tv1732**, Via San Marco Sottomarina, 041-5541675 / **Vignando Luigino**, Via dell' Industria Guarato, 0421-74472 / **Zaffalon Urbano**, via Santa Croce 2040 Venezia, 041-2750670 / **Global Service Impianti di Cerpelloni & C.**, p.zza Plebiscito 9A Avesa, 045-8342935 / **Video Service**, Via Vitruvio Verona, 045-566299 / **DL service di dal Lago Lorenzo**, Via Giaretta 33 Vicenza, 0444-566662 / **Speedy service**, V.le Europa 42/b Thiene, 0445.368235

ESPANA - <http://www.sharp.es>

En caso de una reclamación con vuestra SHARP Microwave, preguntan por favor la casa dónde han comprado su máquina o infórmense en una de las SHARP Service casas siguientes.

ALAVA: Merino Nicolas Jose A., Av Judizmendi 24, Vitoria-Gasteiz, 945/ 25.18.92

ALBACETE: Juman, Cl Ejercito 1, Albacete, 967/ 22.40.78 / **Parreño**, Cl Santiago Rusiñol 50, Albacete, 967/ 22.62.49

ALICANTE: A.E. De Consumo, Cl Peru 42, Alcoy, 96/ 552.32.35 / **David Torregrosa Jorda**, Cl Terrassa 6, Alcoy, 965/ 33.43.06 / **Eurosat, S.L.**, Cl Montero Rios 33, Alicante, 96/ 525.80.40 / **Angel Avellan Puig**, Cl Poeta Quintana 13, Alicante, 965/ 21.32.55 / **Joaquin Saez Servicios**, Cl Escorpion 6-8, Alicante, 96/ 528.73.33 / **Video Electronica Noguera**, Cl Castellon 17, Altea, 965/ 84.41.58 / **Tele-Color**, Cl Del Vent 9, Benidorm, 96/ 585.24.60 / **Joaquin A. Lon Jaen**, Cl Patricio Ferrandiz 66, Denia, 96/ 578.67.50 / **Trinitario Gea**, Cl Jaime Pomares Javaloyes 47, Elche, 96/ 545.56.25 / **Unisat**, Cl Duque De Tamames 9, Orihuela, 96/ 674.11.94 / **Jose A. Patiño Villena**, Cr De Bigastro 1, Orihuela, 96/ 571.74.29 / **Electroservicios Plaza**, Pz Santiago 5, Orihuela, 96/ 828.45.67 / **E.Electrosax**, Cl Rio Turia 1, Sax, 96/ 547.42.32 / **Electronica Santa Pola**, Cl Orihuela 43, Torrevejeja, 96/ 571.25.58 / **A.T. Tv. Video**, Av De La Constitucion 185 D, Villena, 965/ 80.02.31

ALMERIA: Televideo, Cl Velazquez 7 Local-A, Adra, 950/ 40.18.63 / **Servirap**, Cl Angel Ochotonera 11, Almeria, 950/ 27.40.67 / **Sonivitel S.L.**, Cl Poeta Paco Aquino 51, Almeria, 950/ 22.97.55 / **Servicio Tecnico Ponce**, Plg Ps Maritimo E-Europa 1, Garrucha, 950/ 13.28.37

ASTURIAS: Asturservice, Cl Sanchez Calvo 6 Bjos., Aviles, 98/ 556.83.87 / **S.A.T. Juan-Manuel**, Cl Uria 60, Cangas De Narcea, 98/ 581.22.48 / **Manuel Alea Villa**, Cl Llano Morgolles S/N, Cangas De Onis, 98/ 592.26.40 / **Electronica Edimar, S.A.**, Cl Cangas De Onis 4, Gijon, 98/ 535.34.51 / **Astusetel S.L.**, Cl Cea Bermudez 9, Gijon, 98/ 539.10.11 / **Juan Morillon Del Corro**, Av De Gijon 19, La Felguera/Langreo, 98/ 567.40.24 / **Santiago Valderrey**, Cl Dr. Venancio Mtez. 7, Navia, 98/ 563.18.61 / **Alvarez Olivar Casilda**, Cl San Jose 12, Oviedo, 98/ 522.37.39 / **G.A.M.I.F.E.L.**, Cl Ricardo Montes 6, Oviedo, 98/ 528.43.60

AVILA: Daniel Serran0 Labrado, Cl Jose Gochicoa 16, Arenas De S.Pedro, 920/ 37.15.16 / **Electronica Gredos**, Cl Eduardo Marquina 24, Avila, 920/ 22.48.39 / **Reparaciones San Segundo**, Cl Soria 6, Avila, 920/ 22.33.21

BADAJOS: Indalecio Amaya Sanchez, Cl Carreras 11, Almendralejo, 924/ 66.47.01 / **Electronica Bote**, Pz Portugal 2, Badajoz, 924/ 22.17.40 / **Patricio Electronica**, Cl Reyes Huertas 7, Merida, 924/ 33.04.13 / **Electronica Centeno S.L.**, Av Del Zafra 1, Puebla Sancho Perez, 924/ 57.53.08 / **C.E. Vilanovense C.B.**, Cl Camino Magacela 4 Local-5, Villanueva Serena, 924/ 84.59.92

BALEARES (MENORCA): Insat, Cb, Cl Pintor Calbo 30, Mahon, 971/ 36.53.18

BALEARES (IBIZA): Reparaciones Ortega, Cl Via Punica 33, Ibiza, 971/ 39.01.55

BALEARES (MALLORCA): Instalaciones Maes, S.L., Cl Son Nadal 63, Palma De Mallorca, 971/ 27.49.47

BARCELONA: Servinters, S.C.C.L., Pz Casagemes 20, Badalona, 93/ 389.44.60 / **Fermo**, Av Morera 5, Badalona, 93/ 465.22.00 / **Videocolor**, Cl Villarroel 44, Barcelona, 93/ 454.99.08 / **4 En 1 Reparaciones**, Cl Taquigrafo Marti 19, Barcelona, 93/ 430.97.26 / **La Clinica Del Electrodo**, Cl Balmes 160, Barcelona, 93/ 236.44.11 / **Pulgar I Edo S.L.**, Cl Castillejos 333, Barcelona, 93/ 436.44.11 / **Domotica**, Av Diagonal 296, Barcelona, 93/ 408.66.22 / **Estarlich**, Cl Industria 131, Calella, 93/ 766.22.33 / **Joaquin Casajoana Pages**, Cl Major 19 (Tienda), Castelldefels, 93/ 664.43.60 / **Electronica Mateos**, Cr De Caldas (Bajos) 76, Granollers, 93/ 849.28.77 / **Teelco**, Av Balmes 90, Igualada, 93/ 805.11.90 / **Elde**, Cl Bruch 55, Manresa, 93/ 872.85.42 / **Totvisio Electronica S.L.**, Pj Ferrer 14, Manresa, 93/ 873.88.81 / **Ramon Villaret De Gea**, Cl Moli De Vent 21, Mataro, 93/ 798.02.48 / **Estarlich**, Cl Auquebisbe Creus 12, Mataro, 93/ 790.22.89 / **Salja & Mat**, Cl La Raseta 15 L3, Molins De Rey, 93/ 668.13.61 / **Ce.Va.Sat**, Ps Rubio I Ors 105, Sabadell, 93/ 710.76.13 / **Servei Tecnic Ferrer**, Cl Sarda 37, Sabadell, 93/ 710.51.38 / **Fix Servicio Tecnico**, Cl Valles 88, Sant Cugat Valles, 93/ 675.59.02 / **Ce. Va. Sat, S.C.**, Cr Matadepera 87, Terrassa, 93/ 785.51.11 / **Laurea S.A.T.**, Cl Guillerries Bis 20, Vic, 93/ 889.02.48 / **Fred Vilafranca**, Cl Progres 42, Vilafranca Del Penedes, 93/ 890.48.52 / **Top Electronica**, Cl Misser Rufet 4 Bjos, Vilafranca Penedes, 93/ 890.35.91

BILBAO: Telnor, Pz Juanene 5 Tras., Erandio, 94/ 417.04.97

BURGOS: Servitec Burgos S.L., Cl Lavaderos 7-9, Burgos, 947/ 22.41.68 / **Electronica Mas**, Cl Alfonso Vi 6, Miranda De Ebro, 947/ 31.49.94

CACERES: Ruiz Garcia Jose, Cl Ecuador 5-B, Caceres, 927/ 22.48.86 / **Arsenio Sanchez, C.B.**, Cl Tornavacas 9, Plasencia, 927/ 41.11.21 / **Radio Sanchez C.B.**, Av De Miajadas S/N, Trujillo, 927/ 32.06.88

CADIZ: Jose Borja Y Jose Arana, Cl San Antonio 31, Algeciras, 956/ 66.60.53 / **Galan Sat S.L.**, Cl Cruz Roja Española 11, Cadiz, 956/ 20.14.17 / **Fermafrio**, Pz España 1, Cadiz, 956/ 28.10.82 / **Novomam-Sat**, Pol. Urbisur, Jorge Juan 4, Chiclana De La Frontera, 956/ 40.12.09 / **Electronica Y Climatizacion Jeda**, Cl Divina Pastora E-1 L-4,5,6, Jerez La Frontera, 956/ 33.64.99 / **Servitel**, Cl Porvenir 11 Local, Jerez La Frontera, 956/ 33.76.55 / **Electrogan**, Cl Pagador 31, Pto. Sta. Maria, 956/ 87.07.05 / **Galan Sat S.L.**, Cl Factoria Matagorda 52, Puerto Real, 956/ 83.35.35 / **Rota Electrosur**, Cl Malaga 11, Rota, 956/ 81.59.60

• ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

CANTABRIA: **Electronica Seyma**, Cl Camilo Alonso Vega 48, Santander, 942/ 32.50.60

CASTELLON: **Electronica Maestrat**, Ps Febrer Soriano 65, Benicarlo, 964/ 46.03.08 / **Asiste, S.L.**, Av De Valencia Nave 19, Castellon, 964/ 21.57.69 / **Vensat Reparaciones**, Cl Vinaros 24, Castellon, 964/ 20.57.12

CEUTA: **Pedro A. Carcaño Lopez**, Cl Urano (local 7), Ceuta, 956/ 50.43.99

CIUDAD REAL: **Tele-Nueva**, Cl Campo 56, Tomelloso, 926/ 50.59.96 / **Electronica Arellano**, Cl Lorenzo Rivas 14, Alcazar De San Juan, 926/ 54.78.95 / **Lara Technitel**, Cl De La Jara 1, Ciudad Real, 926/ 21.17.87 / **Satelec**, Cl Libertad 13, Ciudad Real, 926/ 22.01.55 / **Climatec**, Cl Pozo 3 4º A, Puertollano, 652/ 79.03.60 / **Angel Rodero Bellow**, Cl Asturias 26, Tomelloso, 926/ 51.52.76 / **Electrodiaz S.L.**, Cl Buensuceso 10, Valdepeñas, 926/ 32.23.24

CORDOBA: **Electronica Sales**, Cl Andalucía 11, Aguilar Frontera, 957/ 66.09.04 / **Dueñas Ca I As Teodoro**, Cl Hermano Juan Fdez 15, Cordoba, 957/ 26.35.06 / **Cayro**, Cl Hermano Juan Fdez. 15, Cordoba, 957/ 26.35.06 / **Microm Electronica**, Av Aeropuerto 2, Cordoba, 957/ 23.02.22 / **Antonio Gonzalez Esquinas**, Cl Gral Primo Rivera 61, Peñarroya, 957/ 57.10.50 / **Serpriego S.L.**, Cl San Luis 4 Bjo. Izda., Priego De Cordoba, 957/ 54.15.11

GIRONA: **Reparaciones Pilsa S.C.**, Cl J. Pascual I Prats 8, Gerona, 972/ 20.66.96 / **Feliu Canalias**, Cl Major 26, Campdevanòl, 972/ 73.01.72 / **Riera Daviu**, Cl Torras Y Bages 19, Figueres, 972/ 50.32.64 / **Satel**, Ps De Barcelona 12, Olot, 972/ 26.55.19 / **New Meresa**, Cl Surera Bertran 23, Palafrugell, 972/ 30.44.54 / **Arbe Servei**, Av Pompeu Fabra 134, Palafrugell, 696/ 20.14.08

GRANADA: **Servicosta**, Pz Dr. Alvarez Riosol 1, Almuñecar, 958/ 63.11.43 / **Digimat Electronica**, Av Jose De Mora 16, Baza, 958/ 70.04.52 / **Electronica Wenceslao**, Cl Fontiveros 42, Granada, 958/ 81.16.16 / **Fermasa**, Cl Azorin 7, Granada, 958/ 25.64.77 / **Servigon**, Cl Hospital De La Virgen 22, Granada, 958/ 20.52.81 / **Electronica Vargun**, C/.Mozart L-2 Ed.Granate, Granada, 958/ 26.06.01

GUADALAJARA: **Tecnicas Marvi S.L.**, Pz Capitan Boixareu 51, Guadalajara, 949/ 23.27.63 **Ferreteria Toledano**, Cl Ejercito 17 A, Guadalajara, 949/ 23.02.61

GUIPUZCOA: **Teknibat Electronica**, Cl Zezenbide 4, Eibar, 943/ 70.24.37 / **Estudios 3, C.B.**, Pz De Los Estudios 3, San Sebastian, 943/ 45.37.97 / **Reparaciones Urruti S.L.**, Ps Aintzieta 32, San Sebastian, 943/ 45.84.10

HUELVA: **Abril Sanchez Valentin**, Cl Cadiz 2, Cala, 959/ 10.60.41 / **Telejara**, Pol. Polirrosa Cl-A Nave-27, Huelva, 959/ 22.60.74 / **Telesonid Huelva, S.C.A.**, Cl Fco.Vazquez Limon 4, Huelva, 959/ 24.38.60 / **Airsex Huelva**, Ps De La Glorieta 6, Huelva, 959/ 22.88.13 / **Electro Sur**, Cl Alonso De Ercilla 23, Huelva, 959/ 29.06.15

JAEN: **Electronica Gonzalez**, Corredera San Bartolome 11, Andujar, 953/ 50.33.82 / **Electro Himega, S.A.**, Cl Adarves Bajos 4 C, Jaen, 953/ 24.22.56 / **Uniservic Electronica**, Cl Goya 1 Bjos, Ubeda, 953/ 75.14.19

LA CORUÑA: **Ramsat**, Av Finisterre 117-B, Cee, 981/ 74.74.61 / **Zener Electronica**, Cl Ronda De Monte Alto 15, La Coruña, 981/ 22.07.00 / **S.T. Mendez**, Cl Gil Vicente 13, La Coruña, 981/ 27.52.52 / **Bandin Audio**, Cl Rua Arcos Moldes 2 B-3, Rianxo, 981/ 86.60.23 / **Victor Perez Quintela**, Cl Entrerios 35, Santiago De Compostela, 981/ 58.43.92

LA RIOJA: **Top Service**, Cl Achutegui De Blas 17, Calahorra, 941/ 13.50.35 / **Electronica Musand**, Cl Rey Pastor 60-62, Logroño, 941/ 22.84.52 / **Aguado Sat**, Cl Velez De Guevara 26 Bajo, Logroño, 941/ 25.25.53

LEON: **Prosat**, Pz Doce Martires 5, Leon, 987/ 20.34.10 / **Tecnyser Electro**, Cl Relojero Losada 25, Leon, 987/ 22.77.87 / **Asist. Tecnica Marcos**, Cl Conde De Toreno 5, Leon, 987/ 20.01.01 / **Domespa Bierzo**, Cl Batalla De Lepanto 8, Ponferrada, 987/ 41.14.29

LERIDA: **Satef**, Cl Sant Pelegrí 54, Tarrega, 973/ 50.08.48 / **Electronica Guirao**, Cl Sant Pere Claver 16 B-2, Tarrega, 973/ 50.02.34 / **Jordi Duro Fort**, Cl Industria 6 3º 3º, Tremp, 973/ 65.25.15

LLEIDA: **Ielsa Electronica**, Cl Tarragona 15, Lleida, 973/ 24.71.27 / **Cristel**, Cl Vallcalent 32, Lleida, 973/ 27.08.26

LUGO: **Televexo S.L.**, Cl Nosa Sra. Do Carmen 82, Burela, 982/58.18.57 / **Servicio Tecnico Pasfer**, Av Arcadio Pardiñas 77, Burela, 696/17.86.458 / **Electronica Penelo**, Cl Serra Gañidoira 63, Lugo, 982/ 21.47.43 / **Electronica Fouces**, Cl Benito Vicetto 34, Monforte De Lemos, 982/ 40.24.38

MADRID: **Video Service Electronic**, Cl Era Honda 9, Alcala De Henares, 91/ 880.27.87 / **Variosat, S.L.**, Cl Isla De Corcega 24, Alcobendas, 91/ 662.04.68 / **Ugenasa**, Cl La Canaleja 4, Alcorcon, 91/ 611.52.51 / **Electronica Barajas**, Pz Del Jubilado 8, Barajas, 91/ 305.48.90 / **Tec-Norte**, Cl Santiago Apostol 5, Collado Villalba, 91/851.63.47 / **Garman C.B.**, Cl Carlos Sole 38 Local, Madrid, 91/380.33.49 / **Electronica Garman, C.B.**, Cl Mandarina 15, Madrid, 91/ 368.01.79 / **Electronica Ansar**, Cl Tomasa Ruiz 4, Madrid, 91/ 460.47.45 / **Elbeservi, S.A.**, Cl Dr.R. Castroviejo 19, Madrid, 91/ 386.27.11 / **Cromadelta**, Cl Alfonso XII 31, Mostoles, 91/ 664.16.41

MALAGA: **Servisuel, Edif. La Union**, Cm De Las Cañadas Lc 2, Fuengirola, 952/ 46.90.28 / **Climaire Plus**, Cl Guaro 4, Malaga, 95/ 234.50.36 / **Electronica Garcia Campoy**, Av Velazquez 5, Malaga, 952/ 32.00.77 / **Electronica Bg**, Cl Andalucía 2, San Pedro De Alcantara, 952/ 78.50.09 / **Video Taller, S.C.**, Edif. La Noria B Bjos-5, Torre Del Mar, 952/ 54.23.95

MELILLA: **Sonitec**, Cl Ejercito Español 3, Melilla, 952/ 68.30.80 / **MURCIA:** **Reg., C.B.**, Cl Ramon Y Cajal 27, Cartagena, 968/ 51.00.06 / **Caro Porlan Raimundo**, Cl Jose Mouliaa 45, Lorca, 968/ 46.18.11 / **J. Luis Haro Calvo**, Cl La Seda 8 Edif. Las Terrazas, Lorca, 968/ 47.18.79 / **Electroservicios Seba,C.B.**, Cl Isaac Albeniz 4 Bjos, Murcia, 968/ 29.85.93 / **Visatel**, Cl Torre Alvarez S/N, Murcia, 968/24.16.47 / **Electro Servicios Plaza**, Cl Gomez Cortina 10, Murcia, 968/ 28.45.67 / **Angel Lopez Alcaraz**, Cl Sierra Del Espartal 6 (Edif. Ana), Murcia, 968/ 29.39.10 / **Rafael Gomez Yelo**, Ps Corbera 17, Murcia, 968/ 26.14.67

NAVARRA: **A. T. Pamplona**, Cl Julian Gayarre 1, Pamplona, 948/ 24.19.50 / **Unitec**, Cl Fuente Canonigos 5, Tudela, 948/ 82.74.34

ORENSE: **Fernandez Gonzalez Jose**, Av Buenos Aires 75 Bjos, Orense, 988/ 23.48.53 / **Antonio Rodriguez Alvarez**, Cl Cabeza De Manzaneda 7, Orense, 988/ 22.40.98

PALENCIA: **Electronica Javier**, Av Castilla 77, Palencia, 979/ 75.03.74 / **Multiservicio Palencia**, Cl Cardenal Cisneros 20, Palencia, 979/ 74.53.80

PAMPLONA: **Electro Reparaciones 2000**, Cl Monasterio Fitero 26, Pamplona, 948/ 26.79.12

• ADDRESSES D'ENTRETIEN • ONDERHOUDSADRESSEN • DIRECCIONES DE SERVICIO • INDIRIZZI DI SERVIZIO •

PONTEVEDRA: **Imason**, Cl Loureiro Crespo 43, Pontevedra, 986/ 84.16.36 / **Central De Servicios**, Cl Asturias (Bajo) 10, Vigo, 986/ 37.47.45 / **Sial-Alvimo S.L.**, C/ C.Torrecedeira 92 Bjos, Vigo, 986/ 29.93.01 / **Electronica Cambados**, Cl Camilo Jose Cela 13, Vilagarcia Arousa, 986/ 50.83.27

SALAMANCA: **Almat Electronica**, Cl Galileo 21, Salamanca, 923/ 22.45.08 / **J. Daniel Martinez**, Cl Abraham Lacut 11-15, Salamanca, 923/ 19.16.10

SEGOVIA: **Guijo S.T.**, Cl Teofilo Ayuso 2 Local, Segovia, 921/ 42.94.18

SEVILLA: **Electro 93 S.L.**, Cl Melliza 1, Dos Hermanas, 95/ 472.37.16 / **Electronica Bersabe**, Pasaje Merinos 62 A, Ecija, 95/ 483.33.93 / **Electronica Guillen**, Cl La Cilla 70, Osuna, 954/ 81.12.96 / **Electronica Triana**, Cl Evangelista 69-71 L-25, Sevilla, 95/ 433.83.03 / **Telepal**, Cl Julio Verne 49, Sevilla, 95/ 464.95.80 / **Auvitel, S.L.**, Cl Virgen De Africa 20, Sevilla, 95/ 427.57.07 / **Luis Rivas Caldas**, Cl Febo 16, Sevilla, 95/ 451.73.55 / **Intersat Sevilla**, Cl Beethoven 5, Sevilla, 95/ 443.02.26 / **Frilar**, Pol. Indust. Navisa C/A 47, Sevilla, 95/ 492.14.44 / **Televideo Nervion**, Cl Juan Curiel 22, Sevilla, 95/ 458.10.66

SORIA: **Teco**, Cl Antolin De Soria 10, Soria, 975/ 22.61.25

TARRAGONA: **Selecco S.L.**, Cl Calderon De La Barca 11, Amposta, 977/ 70.00.12 / **Mañe Grifolls**, Cl Jesus 21, Calafell, 977/ 69.04.39 / **Tecno Serveis Mora**, Cl Pau Picasso 1, Mora D'ebre, 977/ 40.08.83 / **Euro Tecnic Electronica**, Cl Lepanto 16-18, Reus, 977/ 32.24.89 / **Martorell Altes Francisco**, Cl Roseta Mauri 10, Reus, 977/ 75.32.41 / **Electronica Loguard**, Cl Vapor Vell 17, Reus, 977/ 32.38.04 / **Electronica S. Torres**, Cl Ernest Vilches 4-B L-2, Tarragona, 977/ 21.21.48 / **Sertecs, S.C.**, Cl Caputxins (Bajos) 22, Tarragona, 977/ 22.18.51 / **Electro Servei C.B.**, Ps Moreira 10, Tortosa, 977/ 51.04.42

TERUEL: **Electronica Alcañiz S.L.**, Cl Carmen 21, Alcañiz, 979/ 87.07.94 / **Teleservicio Bajo Aragon**, Cl Romualdo Soler 4, Alcañiz, 978/ 87.08.10 / **Alejandro Hernandez**, Rb San Julian 59, Teruel, 978/ 60.85.51

TOLEDO: **Electro Anaya**, Cl Vertedera Alta 14, Consuegra, 925/ 48.09.81 / **Electronica Rivas**, Cl Barrio San Juan 1, Talavera La Reina, 925/ 80.55.46 / **Electronica Fe-Car, S.L.**, Av Santa Barbara 30, Toledo, 925/ 21.21.45 / **Electronica Jopal S.L.**, Av Santa Barbara S/N, Toledo, 925/ 25.04.42

VALENCIA: **Envisa Electronic, S.L.**, Cl General Espartero 9, Alzira, 96/ 241.24.87 / **Tecno Hogar**, Cl Dos De Mayo 41, Gandia, 96/ 286.53.35 / **Electro Servis**, Cl Grupo San Valero 4-6, Sueca, 96/ 170.38.50 / **Frifonta**, Cl Actor Llorens 3, Valencia, 96/ 369.92.66 / **Servicios Electronicos**, Cl Doctor Oloriz 3, Valencia, 96/ 340.20.34 / **Antonio Monleon, S.L.**, Av De La Plata 91, Valencia, 96/ 334.55.87

VALLADOLID: **Electronica Vitelson**, Pz Del Mercado 9, Medina Del Campo, 983/ 80.43.56 / **Teleservicios**, Cl Esgueva 6, Valladolid, 983/ 30.92.61 / **Asist. Tecnica Marcos**, Cl Pio Del Rio Horteiga 2-4, Valladolid, 983/ 29.78.66 / **Jesus Albuquerque**, Cl Vinos Ribera Del Duero 10, Valladolid, 983/ 24.62.26 / **Teodoro Negro Hernandez**, Glorieta Descubrimiento 4, Valladolid, 983/ 39.17.81

VIZCAYA: **Servitele**, Cl Autonomia 24 Galerias, Bilbao, 94/ 444.89.02 / **Negredo Martin Daniel**, Cl Padre Pernet 8, Bilbao, 94/ 411.22.82 / **Collantes Martin Onofre**, Cl Ortuño De Alango 7, Portugalete, 94/ 483.21.22

ZAMORA: **R.T.V. Blanco**, Cl Eduardo Julian Perez 9, Zamora, 980/ 51.14.41

ZARAGOZA: **Cinca Monterde Antonio**, Cl Via Universitas 52, Zaragoza, 976/ 31.69.65 / **Aragon Televideo, S.C.**, Cl Batalla Clavijo 18, Zaragoza, 976/ 32.97.12

SWITZERLAND - <http://www.sharp.ch>

Sharp Electronics AG, Langwiesenstrasse 7, CH-8108 Dällikon, +41 1 846 61 11

SWEDEN - <http://www.sharp.se>

Bild&Ljudservice, Roxviksgatan 8, 582 73 Linköping, 013-356250

Jönköping Antenn & TV Service, Fridhemsvägen 20, 553 02 Jönköping, 036-161690

Tomi Elektronik, Svandammsplan 2, 126 47 Hägersten, 08-186170

Tv Trim, St Pauligatan 37, 416 90 Göteborg, 031-847200

Tv-berg, Krusegatan 26, 212 25 Malmö, 040-188380

NORWAY

Service Eksperten, Trondheimsvn 436B, N-0962 Oslo, 22 90 19 30

ICELAND

Braedurnir Ormsson Ltd, PO box 8790, IS-128 Reykjavik, +354-5332800

Hjolttaekni Ehf, Skeifar, IS-108 Reykjavik, +354-5332150

DENMARK

Elektronik Centret, Literbuen 10A, DK2740 Skovlunde, 44 50 30 00

SUOMI

Oy Perkko, PL 40 Rälssintie 6, SF-00721 Helsinki, +35-8947805000

Theho Video Oy, Niityläntie 3, SF-0620 Helsinki, +35-891461500

SPECIFICATIONS








AC Line Voltage	: 230 V, 50 Hz, single phase
Distribution line fuse/circuit breaker	: Minimum 16 A
AC Power required:	Microwave : 1.25 kW Grill : 1.00 kW Dual Grill : 2.2 kW
Output power:	Microwave : 800 W (IEC 60705) Grill : 1000 W
Microwave Frequency:	: 2450 MHz
Outside Dimensions:	R-61FBST : 496 mm (W) x 378 mm (H) x 316 mm (D) R-62FBST : 596 mm (W) x 378 mm (H) x 316 mm (D)
Cavity Dimensions	: 285 mm (W) x 202 mm (H) x 298 mm (D) *
Oven Capacity	: 17 litres *
Turntable	: ø 272 mm, glass
Weight	: approx. 16 kg
Oven lamp	: 25 W/240 - 250 V

* Internal capacity is calculated by measuring maximum width, depth and height.
Actual capacity for holding food is less.

This oven complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AS PART OF
CONTINUOUS IMPROVEMENT

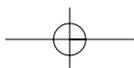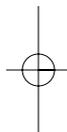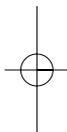

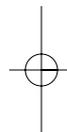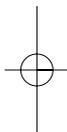

SHARP

SHARP ELECTRONICS (EUROPE) GMBH.

Sonninstrasse 3
20097 Hamburg
Germany

SHARP MANUFACTURING

ist ein Mitglied von:
est un membre de:
is een lid van:
è un membro di:
es un miembro de:



Gedruckt in Grossbritannien
Imprimé au Royaume-Uni
Gedruckt in Groot-Brittannie
Stampato in Gran Bretagna
Impreso en el Reino Unido



Der Zellstoff zur
Herstellung dieses
Papiers kommt zu
100 % aus nachhaltig
bewirtschafteten
Wäldern

Ce papier est
entièrement fabriqué
à partir de pâte à
papier provenant
de forêts durables

De pulp die gebruik is
voor de vervaardiging
van dit papier is voor
100 % afkomstig uit
bossen die doorlopend
opnieuw aangepland
worden

Il 100 % della pasta
utilizzata per
produrre questa carta
proviene da foreste
sostenibili

El 100 % de la
pasta utilizada en
la fabricación de
este papel procede
de bosques
sostenibles

TINS-A326URRO

SHARP

SHARP ELECTRONICS (EUROPE) GMBH.

Sonninstrasse 3
20097 Hamburg
Germany

SHARP MANUFACTURING

ist ein Mitglied von:
est un membre de:
is een lid van:
è un membro di:
es un miembro de:



Gedruckt in Grossbritannien
Imprimé au Royaume-Uni
Gedruckt in Groot-Britannie
Stampato in Gran Bretagna
Impreso en el Reino Unido



Das Papier dieser
Bedienungsanleitung
besteht zu 100 %
aus Altpapier

Le papier de ce
mode d'emploi est
fait de 100 %
de papier réutilisé

De papier voor deze
gebruiksaanwijzing
is van 100 %
hergebruikt papier
gemaakt

La carta di questo
manuale d'istruzioni
è fatta di 100 %
della carta riciclata

El papel de este
manual de
instrucciones se
hace de 100 %
es del papel
reciclado

TINS-A326URRO 